


treesse

minipool

Zen Active

PR1 - SP1

Operating and maintenance manual

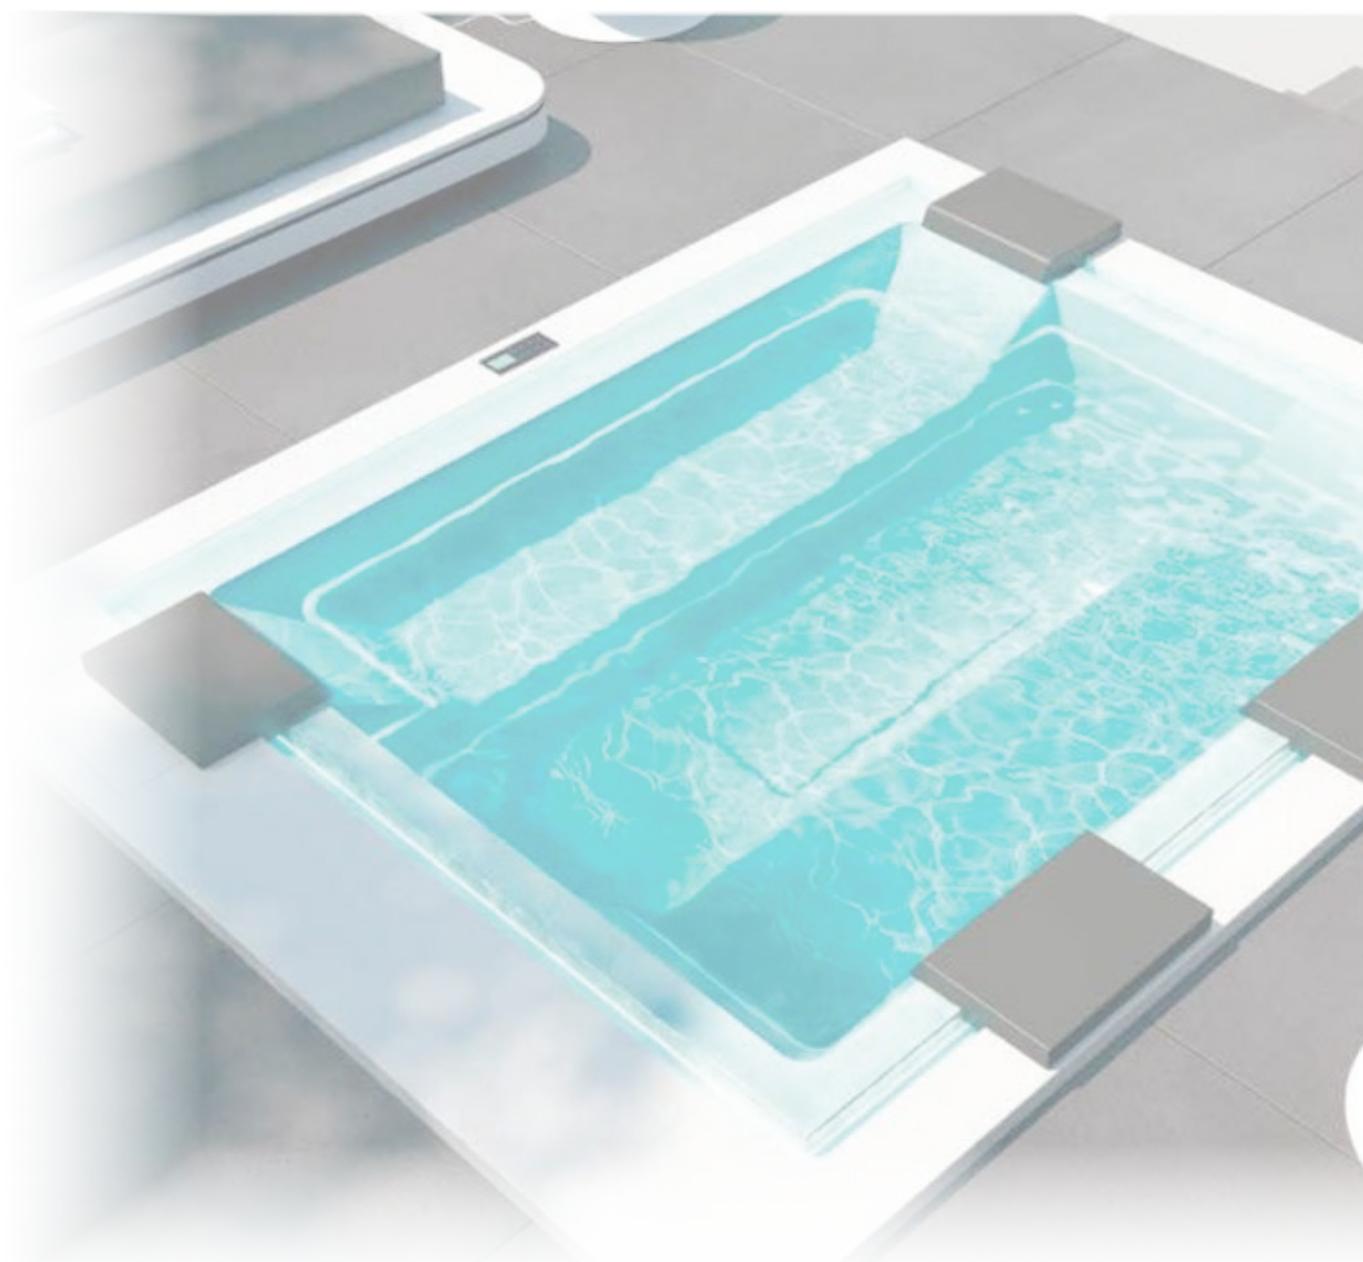

Dear Customer,

We thank you for choosing a Treesome minipool and welcome you to our world of total wellness.

We remind you that our products are manufactured with superb quality materials and are accurately tested in compliance with the provisions of the safety regulations in force.

Great innovation and sophisticated design are added to this guarantee of quality and comfort.

Now sit back and relax.

Gruppo Tre S s.p.a.



We hope that the use of this minipool provides you with an experience of pure pleasure.

If you have problems, contact your authorised dealer or the Manufacturer at one of the following addresses:

info@gruppotres.it
www.gruppotreesse.it
GRUPPO TRE S s.p.a.
01036 Nepi (VT) - Italy
S.S. Cassia km. 36.400
Settevene industrial area
tel. (+39) 0761 527242
fax (+39) 0761 527223

It is mandatory to keep the original proof of purchase (receipt/invoice etc.) in case servicing is required under warranty.

The serial number is indicated in the equipment compartment.

EXPLANATION OF PICTOGRAMS



Danger! Situation presenting immediate danger, or a hazardous situation that could cause injury or death.



More info: helps the installer understand a topic better



The pictogram refers to text in another document



Ecological notes for respecting the environment

Safety instructions _____ **6**

Use _____ **8**

1 BEFORE USING THE MINIPOOL... _____ 8
 USE ADVICE _____ 8
 TIME IN THE WATER _____ 8
 CHROMATHERAPY _____ 8
 USE _____ 9
 ESSENCES AND BATH SALTS _____ 9
 USE _____ 11

Zen Active PR1

2 MINIPOOL FUNCTIONS _____ 11
3 CONTROL PANEL: HOW TO USE IT _____ 14
4 ALARMS _____ 19
5 EMPTYING THE MINIPOOL _____ 21
6 FILLING THE MINIPOOL _____ 22

Zen Active SP1

2 MINIPOOL FUNCTIONS _____ 25
3 CONTROL PANEL: HOW TO USE IT _____ 28
4 ALARMS _____ 31
5 EMPTYING THE MINIPOOL _____ 33
6 FILLING THE MINIPOOL _____ 34

Water treatment _____ **39**

Maintenance _____ **39**

1 CHECKING THE WATER PARAMETERS _____ 39
2 DISINFECTION AND CLEANING OF THE WATER _____ 41
3 CLEANING THE PAPER FILTER _____ 45
4 NON-USE OF THE MINIPOOL FOR PROLONGED PERIODS _____ 46
5 CLEANING THE MINIPOOL _____ 47

WARRANTY CONDITIONS _____ 48
 DISPOSAL AT END OF LIFE _____ 48
 TROUBLESHOOTING _____ 49

U

T

M

D

GENERAL SAFETY INSTRUCTIONS



This manual has been prepared to help you get the most out of your minipool in a safe manner, avoiding circumstances that could void the warranty.

Read this guide carefully before using the equipment and performing any maintenance, and keep it on hand for any future needs.

If you do not understand something, contact the manufacturer for an explanation.



Unauthorised actions, tampering or modifications that do not follow the information provided in this manual can cause damages, injuries or fatal accidents and null and void the warranty.



Any use or maintenance of the minipool carried out in a manner different from what is indicated in this manual can void the warranty.



Before performing any installation or maintenance disconnect the electricity and water supply.



Avoid placing any object or substance on the surfaces of the minipool that can damage them.



DANGER!
RISK OF ELECTRIC SHOCK.

Do not place any electrical appliance - like hair dryers, lights, radios, phones or TV - closer than 1.5 m from the minipool.

SAFETY INSTRUCTIONS FOR USE



RISK OF DROWNING! To reduce the risk of accidents, do not allow children under the age of eight years, people with reduced psychological and sensory abilities or those who are inexperienced to use the minipool without close constant surveillance.



Do not dive into the minipool: risk of serious personal injury and structural damage to the equipment.



WARNING!
TO REDUCE THE RISK OF INJURY

- The minipool water must never exceed 40°C in order to avoid hyperthermia.
- Water temperatures between 38° and 40°C are still considered safe for a healthy adult. Lower temperatures are recommended for extended use (exceeding 10 minutes), for children or if you are alone.
- To minimise the risks, always feel the temperature with your hand to verify the temperature and comfort level before allowing children to get into the minipool.
- Pregnant women or those presumed to be should consult a doctor before using the minipool.
- People with infectious, skin or contagious diseases should NOT use the minipool.
- People with health problems should consult a physician before using the minipool, especially those suffering from obesity, heart disease, low or high blood pressure, circulatory problems, diabetes, clotting problems, pregnant women, etc.
- The use of drugs, alcohol, drugs, medicines before or during use of the minipool can lead to unconsciousness and consequent possibility of drowning.




The Manufacturer recommends that you always place the optional cover when the minipool is not in use.

The cover is not designed to support weights. Do not walk, jump, sit or place any objects on it.

SAFETY INSTRUCTIONS FOR MAINTENANCE

 Perform maintenance on your minipool on a regular basis as this will maintain the surfaces and functional parts in optimal condition and also ensure maximum hygiene and safety when using the minipool.

 During the maintenance of the pool and the use of chemicals, always use personal protection (e.g., protective gloves and glasses).

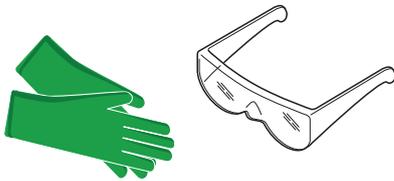

 For routine maintenance, use only the products indicated by the Manufacturer: other types of detergents or disinfectants could irreparably damaging the minipool surfaces and circuits (damage resulting from the use of unsuitable products is not covered by the warranty).

 Unauthorised actions, tampering or modifications that do not follow the information provided in this manual can cause damages, injuries or fatal accidents and null and void the warranty.

 Persons not involved with equipment maintenance may not pass through or occupy the work area.



More information

HYPERTHERMIA

 Prolonged immersion in hot water may cause hyperthermia, a dangerous condition that occurs when the internal temperature of the body exceeds the normal value (37°C).

The first symptoms of hyperthermia include dizziness, fainting, drowsiness, lethargy and a body temperature higher than 37°C.

The physical effects of hyperthermia include unawareness of impending hazard, failure to perceive heat, physical inability to exit the minipool, foetal damage in pregnant women and unconsciousness resulting in a danger of drowning.

 The use of alcohol, drugs or medication can greatly increase the risk of fatal hyperthermia in hot minipools.

If you suspect hyperthermia pull the person out of the minipool and immediately call for medical assistance. While awaiting assistance, take the person to a cool place and let him or her to lie on his or her back with the head slightly raised by a pillow.

 Before performing any maintenance disconnect the electricity and water supply.

 Being potentially toxic by ingestion and contact, cleaning and disinfectant products **must be kept tightly closed and out of the reach of children or pets. When not in use, store these chemicals in their original labelled and well sealed containers in a cool, dark place, away from heat sources.**

1 BEFORE USING THE MINIPOOL...

Read these chapters before using your new minipool. They will provide you with useful tips to use it safely with maximum benefit.

USE ADVICE

- When using the minipool, do NOT wear loose clothing, pendant jewellery and tie up long hair to avoid the risk of becoming caught in moving parts.
- The time in the minipool should never exceed **20 minutes**.
- Use the whirlpool at **most three times** per week.
- Inside the minipool DO NOT use foaming detergents, soaps, bath oils, greasy lotions or products that are not compatible with the minipool.
- Before entering the minipool take a shower to remove any fatty substances (e.g., sweat, suntan lotion, etc.) that could make the water cloudy and oily.
- The paving around the minipool may become very slippery. Be careful when entering or exiting the water.

TIME IN THE WATER

For a relaxing experience the ideal water temperature is about 33-37°C for a duration of about 20 minutes. In fact, a temperature equal to that of the body fosters vasodilation and muscle relaxation.

For an energising experience, soak for about 10 minutes, preferably in the morning, at about 33°C.

For a draining experience, use the whirlpool for 5-8 minutes at a maximum of 35°-37°C. After leaving the minipool relax for a few minutes to allow the pressure altered by the heat and massage to return to normal.



More information

CHROMATHERAPY

Light is made up of seven basic colours: red, orange, yellow, green, blue, indigo and violet. The classic example of the colour spectrum that we find in nature is the rainbow.

The Egyptians, Greeks and Romans practised heliotherapy (exposure to direct sunlight) for the treatment of various disorders.

In India, ayurvedic medicine has always taken into account how colours affect the balance of the Chakras and how they can help the body and psyche to restore their natural balance.

Red: dissipates the deepest fears and maintains the person well anchored to the present and to the solidity of the earth.

Orange: stimulates feminine creativity, optimism and serenity.

Yellow: brings out emotions and desires, personal power and the ability to perceive the qualities and feelings of others.

Green: reawakens love and openness towards others, selflessness, inner goodness.

Blue: promotes the ability to listen to others. It is related to the expression of one's personality, creativity, imagination, relaxation.

Indigo: has the ability to broaden our understanding and treat disorders that affect sensory organs like eyes, nose and ears.

Violet: cool colour that promotes spirituality, inspiration and imagination.

ESSENCES AND BATH SALTS

Inside the minipool DO NOT use foaming detergents, soaps, bath oils, greasy lotions or products that are not compatible with the minipool. Otherwise the water can become oily or foamy and it could damage the paper filter, causing it to lose effectiveness.

To make your bath even more relaxing and stimulating, use bath salts in moderate amounts or natural essences, ensuring that the products used are **formulated to be compatible with the minipools in laminated resin**.

Products specific for minipools must not:

- Be foamy
- Be oily
- Be flammable
- Contain soluble substances
- Alter the chemical parameters of the minipool water

Follow the quantities and methods indicated on the labels of the products used.

If the water becomes foamy or cloudy after use, change the water and clean the minipool. Then try using less product or contact its manufacturer for more information.



More information

Sweet orange essence

Sweet orange essence is obtained from *Citrus sinensis dulcis*, a plant of the Rutaceae family. Having an astringent and cleansing action, it is helpful for anxiety and stress.

Neroli essence

Neroli essence is obtained from *Citrus aurantium*, a plant of the Rutaceae family. Known for its many properties, it has a calming, balancing and rejuvenating effect.

Ylang Ylang essence

Ylang Ylang essence is obtained from *Cananga odorata*, a plant of the Annonaceae family. It has a calming, hypotensive and aphrodisiac effect.

Myrrh essence

Myrrh essence is obtained from *Commiphora myrrha*, a plant of the Burseraceae family. The essence is harmonising and spiritual, increasing openness to the receipt of energy.

Lavender essence

Lavender essence is derived from *Lavandula angustifolia*, a plant of the Lamiaceae family. It performs a rebalancing action on the central nervous system, calming anxiety and nervousness.

Apricot essence

Apricot essence is derived from *Prunus armeniaca* - Rosaceae, it has a delicate and pleasant scent with calming, relaxing and anti-stress effects.

Eucalyptus essence

The essence made from eucalyptus provides an experience that is energising, balsamic and fresh.


Use

Zen Active PR1 minipool



2A MINIPOOL FUNCTIONS

- 1 - Control panel
- 2 - Overflow edge
- 3 - Pillow
- 4 - Whirlpool
- 5 - Blower (only ZEN ACTIVE PR1)
- 6 - Lymphodraining whirlpool
- 7 - Filling / draining plate

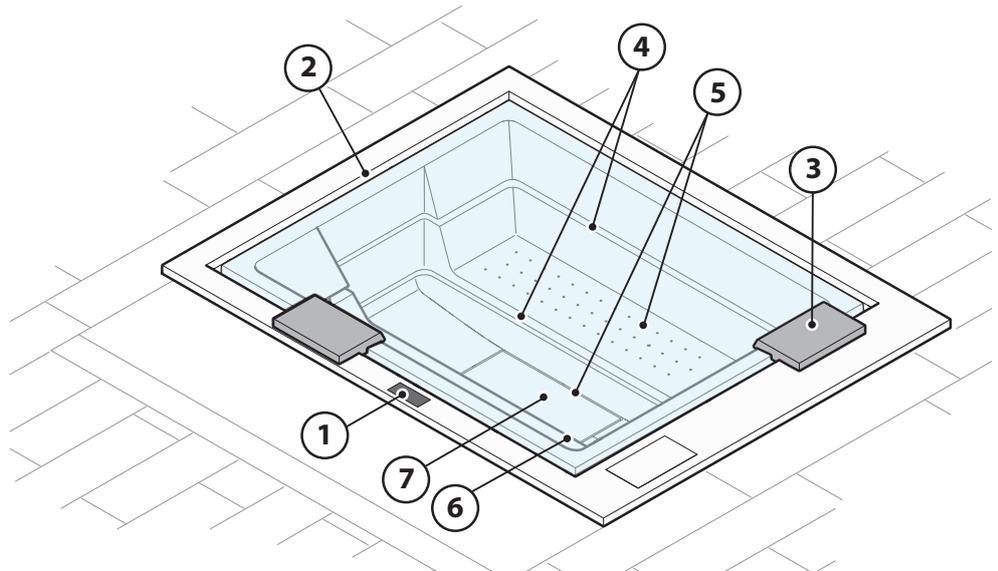

The minipool must ALWAYS remain connected to both the electrical grid and plumbing (filling and draining): this is necessary for filtering, cleaning the filters and maintaining the minipool's water levels and temperature. ALWAYS cover the minipool when inactive. This protects it from the sun's rays, prevents dirt from accumulating inside the bathtub and keeps it from losing heat, thus optimising the efficiency of the heater.


FILLING THE MINIPOOL

Pressing the key provided on the control panel starts the **filling**. This occurs through a concealed spout in the compartment on the bottom of the minipool and is indicated by the illuminated blue LED.

First the compensation tank is filled, and then - once the water has reached the maximum level inside the tank - the bathtub is filled through a recirculation pump, passing through the paper filter and the heater.

After reaching the correct level, the system automatically stops the filling and makes available the functions of whirlpool, recirculation, ozone and heater.

During use of the minipool the system automatically maintains the water level equal to the edge of the bathtub.

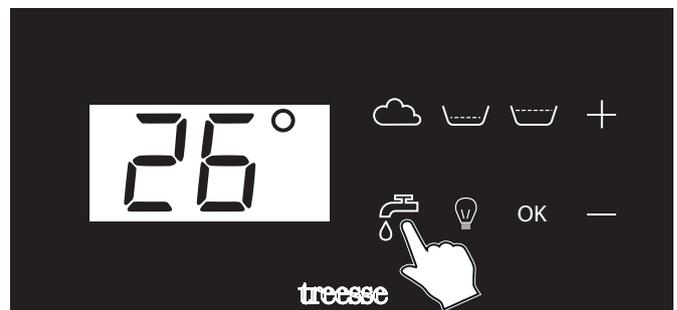

Automatic filling using the keypad pressing the key activates the automatic filling of the minipool, controlled by two level sensors.

MIXING FUNCTION



Treesse minipools feature an automatic **mixing function** during which the whirlpool and blower pumps are activated.

This process is used to mix the water in the bathtub to have a more effective filtering action.

BLOWER

The minipool can be equipped with:

A single blower motor (standard)

➡ activates the nozzles on the bottom to provide a soft and relaxing massage.

A second motor (optional)

➡ activates nozzles on the seat.



For this operation see page 14.

PERIMETER WHIRLPOOL (BACK AND LEGS)

This minipool is equipped with the patented GHOST SYSTEM® whirlpool, a system that is truly invisible, which allows for extremely simple design solutions for bathtubs that are completely free of external nozzles and jets. GHOST SYSTEM®, an exclusive patent of Treesse Group, owes its name to the invisibility of the components, fully incorporated in the bathtub. The system is distinguished by two thin internal perimeter slots that host a large number of jets that are properly oriented.



For this operation see page 14.





WHIRLPOOL CHAISE LONGUE LYMPHODRAINING (OPTIONAL)

In the higher seat there are some jets for a whirlpool with a lymphodrainage effect.

The precise and well-directed flow is very effective and invigorating.



For this operation see page 14.

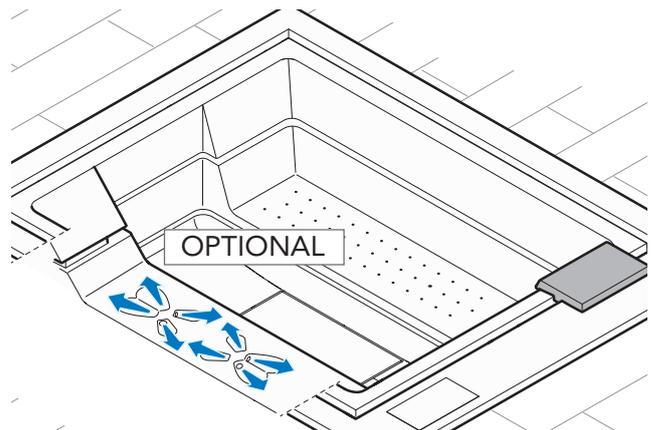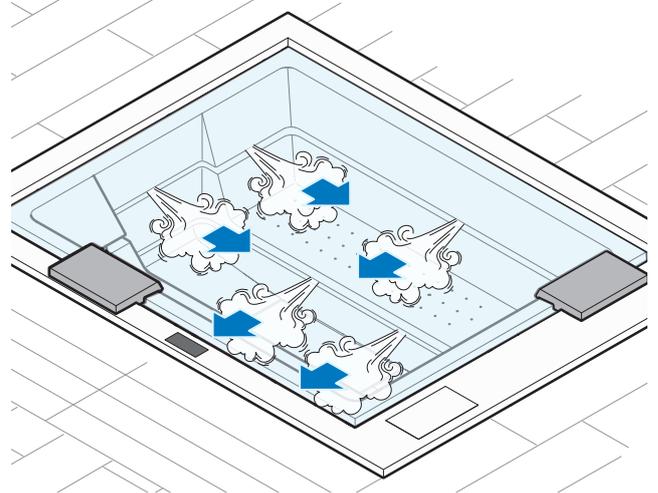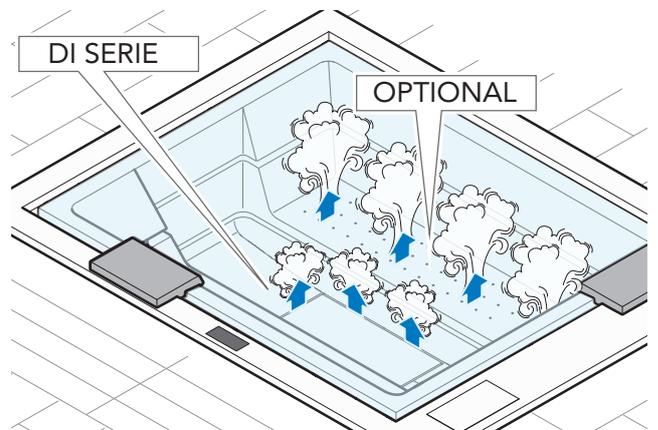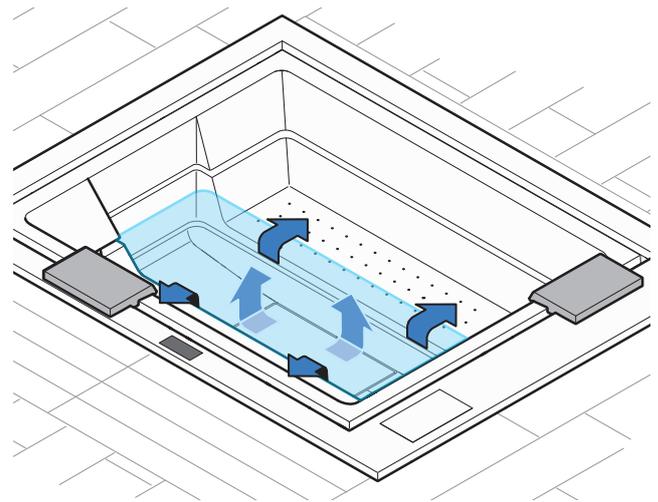

CHROMATHERAPY

Chromatherapy is standard on the infinity version, while on the version with two perimeter slots it is optional. The light "magically" moves the whirlpool in the bathtub.



For this operation see page 16.

OVERFLOW EDGE

The overflow edge of the minipool collects excess water and conveys it to the collection tanks under the bathtub. The water level is always constant, allowing for relaxation and a total wellness experience.

The water that overflows is recovered, filtered and automatically recirculated within the minipool through the intake grille.





The minipool works exclusively when the bathtub and tanks are full of water.



The edge is designed to recover the overflowing water, not for abnormal movements caused by an improper use of the minipool (e.g., diving).

In this regard we strongly recommend entering the bathtub and getting in the water slowly.

When the recirculation of the water overflow is active, the heater automatically activates to manage the water temperature.

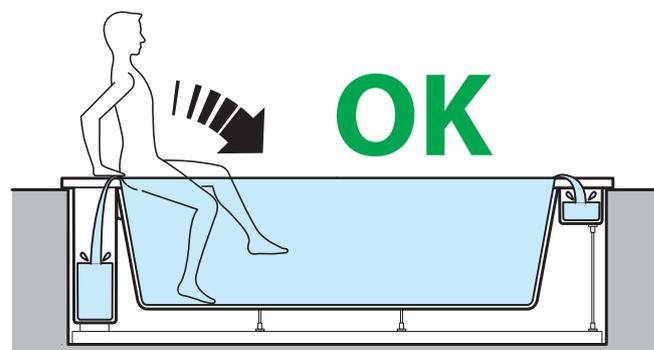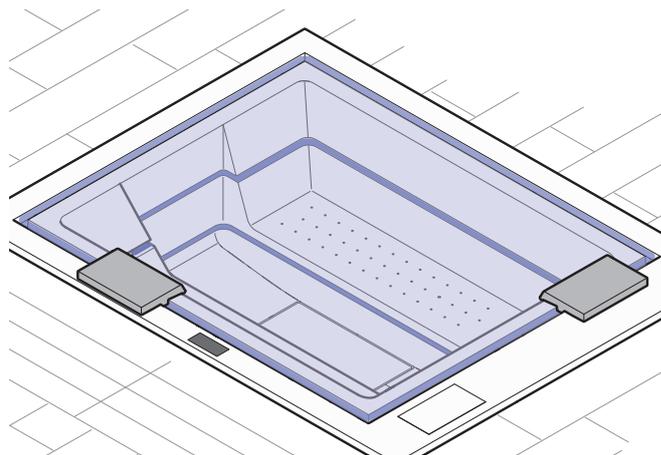**DRAIN AND SUCTION PUMPS**


The minipool drain is positioned on the bottom, hidden by the finishing plate.

This solution makes the use of the bathtub safer and more comfortable.



To clean the drainage grate, just manually remove the finishing plate since it is simply resting on the bottom.








For this operation see page 17.

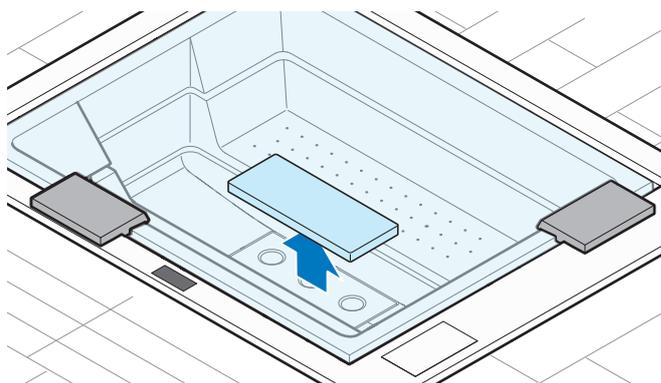

3A CONTROL PANEL: HOW TO USE IT

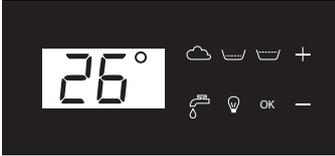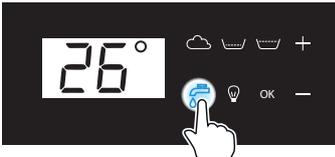
BASIC FUNCTIONS		
<p>POWER ON</p>		<p>The minipool is powered on by connecting it to the mains. When switched on, the display will show the logo "tressee" and after a few seconds the display will show the current ambient temperature, and the various symbols on the keypad will be illuminated with white light.</p>
<p>FILLING</p> 		<p>Pressing the  key activates bathtub filling: filling in progress is indicated by the blue icon.</p> <p><i>First the compensation tank is filled, and then - once the water has reached the maximum level inside the tank - the bathtub is filled through a recirculation pump, passing through the filter and the heater.</i></p> <p>Once filling has been completed and all the conditions necessary for the operation of the minipool are met, the system automatically stops the function and makes available the following functions:</p> <ul style="list-style-type: none"> • WHIRLPOOL • BLOWER • RECIRCULATION* • OZONE* • HEATER** <p>* automatic functions that cannot be activated/deactivated by the user ** automatically manages the water temperature</p> <p><i>During use of the minipool the system automatically maintains the water level equal to the edge of the bathtub.</i></p>
<p>WATER TEMPERATURE ADJUSTMENT</p> 		<p>When one of the two keys  or  is pressed once, the display shows the current setting (default 35°C) and the two keys are illuminated with a strong blue light.</p> <p>From the second press on, the displayed value is increased or decreased by one degree at a time depending on the key pressed (range from 15°C to 40°C).</p> <p><i>After six seconds of inactivity with the keys or if another key is pressed, the adjustment function will end and the two keys will return to white, memorising the new setting.</i></p> <p>The function will activate the heater (flashing degree character) with the objective of heating and maintaining the water temperature at the set value (+/- 0.5°C).</p>

OPERATIONAL FUNCTIONS
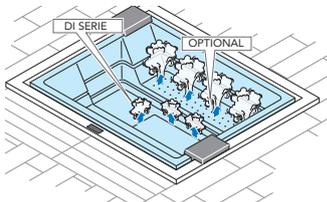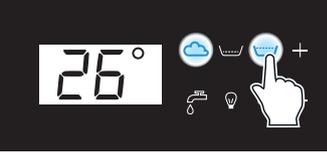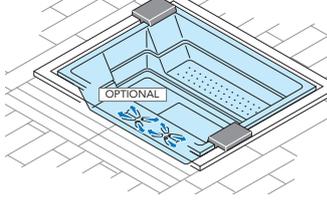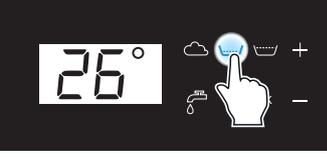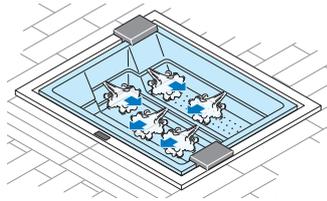
<p>BLOWER</p> 	  	<p> The function can only be activated when the water level is sufficient.</p> <p>The minipool can be equipped with: A single blower motor (standard)  activates the nozzles on the bottom. A second motor (optional)  activates the nozzles on the seat.</p> <p>If there is only one blower motor, pressing the  key starts the bottom nozzle operation (default duration 20 minutes). <i>The blower function on the bottom cannot be started if the whirlpool is running.</i></p> <p>If there are two blower motors (optional), pressing the  key will activate the function, alternating the two zones (bottom nozzles + seat nozzles) with an interval of 30 seconds and always for a maximum duration of 20 minutes. <i>The blower function on the seat can be started even if the whirlpool is running.</i></p> <p>When the  key is pressed again, the blower function stops, the key returns to white and the temperature is shown again on the display.</p> <p><i>If the whirlpool key is pressed during the blower function, the whirlpool starts and stops the blower until it is turned off.</i> If not switched off manually, the function stops automatically after 20 minutes.</p>
<p>LYMPHODRAINING CHAISE LONGUE WHIRLPOOL (OPTIONAL)</p> 	 	<p>Pressing the  key activates the whirlpool function on the legs and the corresponding key turns blue.</p> <p>The  icon appears on the display for six seconds and then is replaced by the temperature.</p> <p>When the key is pressed again, the whirlpool function stops, the key returns to white and the temperature is shown again on the display.</p> <p>If not switched off manually, the function stops automatically after 20 minutes.</p>
<p>PERIMETER WHIRLPOOL (BACK AND LEGS)</p> 	 	<p>The whirlpool is divided into two areas: on the back and on the legs.</p> <p> The functions can only be activated when the water level is sufficient. When EMPTYING, the whirlpool is deactivated.</p> <p>Pressing the  key activates the whirlpool function on the back and legs and the corresponding key turns blue.</p> <p>The  icon appears on the display for six seconds and then is replaced by the temperature.</p> <p>When the key is pressed again, the whirlpool function stops, the key returns to white and the temperature is shown again on the display.</p> <p>If not switched off manually, the function stops automatically after 20 minutes.</p>

OPERATIONAL FUNCTIONS

CHROMATHERAPY

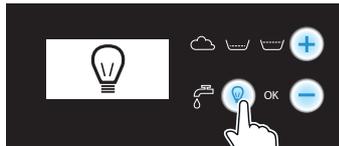

Pressing the light key  activates a sequence of 16 colours that vary in an automatic sequence (default duration two hours): *The light key  and the \oplus and \ominus keys turn blue and the display shows the  symbol for six seconds.*

During this time you can press the \oplus or \ominus key to manually select a colour that you want to remain fixed: *the light key  will remain blue, while the \oplus and \ominus keys will turn white again: at this time it is no longer possible to change colour.*

To once again manually select the colour, press the light key  again and select the desired colour within six seconds with the \oplus or \ominus key.

Once you have selected a fixed colour, to return to the automatic sequence you must turn off and reactivate the function.

To stop the function hold the  key pressed for about three seconds. The key will turn white again and the temperature will reappear on the display.

If not switched off manually, the function stops automatically after two hours.

SPECIAL FUNCTIONS

HOW TO SELECT THE SPECIAL FUNCTIONS

Pressing the "OK" key for more than three seconds accesses a submenu page on the display, where four more special functions are available.

When accessing special functions, the "KEYPAD LOCK" icon is always lit by default.

To scroll through the various functions, press the "+" and "-" keys. When the icon of the desired function lights up, press the "OK" key to activate it.



After six seconds of inactivity the display exits the submenu and returns to showing the water temperature.

KEYPAD LOCK



Activation of this function will not allow the temperature set point to be changed, while the whirlpool, blower and chromatherapy functions will remain active.

To activate it:

 
- (A) Press the "OK" key for at least three seconds.
- (B) This provides access to a submenu page.

- (C) The icon "KEYPAD LOCK"  is illuminated, press the "OK" key to activate it.

When the function is activated, the display will show the word "LOCK" for six seconds and then return to showing the water temperature.

To disable the function, press the "OK" key again for three seconds and then press the "KEYPAD LOCK" key again.

DRAINING

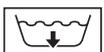

The **emptying** of the minipool can be activated at any time. To activate it:

- (A) Press the "OK" key for at least three seconds.
- (B) this provides access to a submenu page.

- (C) Use the \oplus and \ominus keys until the "EMPTY"  icon is illuminated and press the "OK" key to activate it.

The display shows the  icon throughout the entire emptying operation.

Emptying lasts 120 minutes and for the entire duration the bathtub needs to be powered to allow it to completely drain all residual water from the tank pipes and filter. During emptying, the blower is automatically activated to drain the airpool system pipes.

During emptying of the minipool, the only enabled function is chromatherapy.

To stop the emptying test, disconnect the power supply to the bathtub for about 30 seconds.

SPECIAL FUNCTIONS

SILENCE MODE



This function provides access to a page where the hours of the day can be specified during which the control enters SILENCE operating mode (silent hours), when all the automatic activations of the pumps and/or blowers are inhibited and only the antifreeze safety function remains active.

The functions of whirlpool, blower and chromatherapy are always available.

SILENCE mode setup is available after the programming cycle.

Use the **+** and **-** keys to change the hours, and then the "OK" key to enable silent hours or disable the selection. The silent hours are in white on a dark background.

After six seconds of inactivity, the setting is saved.

During SILENCE mode, the word "SILENCE" and the water temperature alternate on the display.



0	1	2	3	4	5
6	7	8	9	10	11
12	13	14	15	16	17
18	19	20	21	22	23

EXAMPLE

Silent hours highlighted in the table:
silent mode activated from midnight to 7 am and from 3 pm to 4 pm


 
DISABLE (white boxes): silence mode disabled

ENABLE (dark boxes): silence mode enabled (recirculation inactive)

If the function is set, the word "SILENCE" and the water temperature alternate on the display.

If there is an alarm, the temperature and the alarm alternate.

BACKWASHING
 ICON NOT ACTIVE

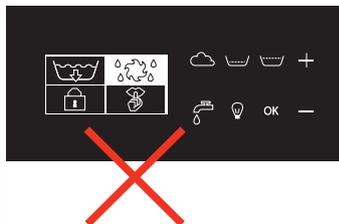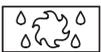

In Zen Active minipools this function is not included, so the icon is deactivated.

4A ALARMS

If any alarms appear during initial startup, read the instructions provided in the following table. If the solution is not possible, immediately contact the Manufacturer to request technical support.

In the meantime, do not try to repair or use the minipool but rather disconnect it from the electricity and water supplies.

ALARMS NOTIFICATIONS	Screen displayed	DESCRIPTION OF THE PROBLEM POSSIBLE SOLUTIONS
<p>H_i -43 Temperature alarm (notification)</p>		<p>Problem description: if the water temperature in the minipool exceeds 42°C all the functions are deactivated, the display shows the "HI" message alternating with the temperature value. Solutions: the alarm and the system will automatically reset when the temperature drops. If the alarm does not reset contact the Manufacturer.</p>
<p>E_r Temperature sensor alarm (alarm)</p>		<p>Problem description: a temperature sensor measures the water temperature inside the minipool, activating the heater when necessary. The allowed water temperatures range from 5°C to 45°C. Values outside the range cause the blocking of all functions and the permanent activation of the alarm message. Solutions: the alarm will reset automatically once the temperature returns to allowed values (5° to 45°). The message is also displayed if the temperature sensor malfunctions. Solutions: make sure that the water temperature is not outside of the permitted values, try to disconnect the power supply to the bathtub and switch it on again after 30 seconds. If the problem persists, verify that the connection with the control unit is correct and has not been tampered with. Otherwise contact the Manufacturer.</p>
<p>FLO No flow alarm (notification)</p>		<p>Problem description: the notification protects the heater and the recirculation pump from running in the event of potential danger. It is activated when the recirculation pump is running, the flow switch does not detect flow for at least five seconds. The display shows the message "FLO" alternating with the temperature, the heater is disabled and the recirculation pump remains active for a maximum of five minutes. Solutions: the notification will automatically reset when flow is restored, otherwise a new alarm will be triggered (see FL alarm).</p>
<p>FLE No flow alarm (alarm)</p>		<p>Problem description: the alarm is activated if the flow sensor malfunctions. The system disables the heater even if the recirculation pump remains active. Solutions: try to disconnect the power supply to the tub and switch it on again after 30 seconds. If the problem persists, verify that the connection with the control unit is correct and has not been tampered with. Otherwise contact the Manufacturer.</p>
<p>FL Clogged filter alarm (alarm)</p>		<p>Problem description: the alarm occurs when lack of flow continues for more than 5 minutes (see "FLO" notification). The system stops, all functions are disabled and the display shows the fixed "FL" alarm. <i>The main causes of what has been described are attributable to:</i></p> <ol style="list-style-type: none"> ① Damage to the circulation pump. Once the minipool restarts, verify that the circulation pump functions correctly. Solutions: Try turning the bathtub off and then turning it back on after 30 seconds. If the problem persists contact the Manufacturer. ② Excessive dirt in the filter due to incorrect treatment of the minipool water (see the Use and maintenance manual in the section Water treatment on page 37). Solutions: turn off the bathtub and clean the filters.

ALARMS NOTIFICATIONS	Screen displayed	DESCRIPTION OF THE PROBLEM POSSIBLE SOLUTIONS
LL Water level alarm (notification)		<p>Problem description: the notification is activated if the water level inside the compensation tank is below the minimum for more than three seconds. The display will show the message "LL" alternating with the temperature, the functions remain enabled, the system will start filling the minipool to restore the level (see the section on filling the minipool on page 34)</p> <p>The notification is activated when a number of people leave the bathtub at the same time (the system automatically restores the level by activating the fill function).</p>
FEr Water level sensors alarm (alarm)		<p>Problem description: the alarm is activated if there is a malfunction of the level sensors, especially when the system detects the maximum level but not the minimum level.</p> <p>Solutions: try to reset the system by switching off the bathtub for about 30 seconds. If the alarm does not reset contact the Manufacturer.</p>
AL 1 Water fill timeout alarm (alarm)		<p>Problem description: the alarm is activated when filling is in progress, if the minimum level is not reached within 90 minutes from the start of the filling.</p> <p>Solutions: The alarm resets only by switching off the minipool and turning it back on after about 30 seconds.</p> <p>The main causes of what has been described are attributable to:</p> <ol style="list-style-type: none"> ① Water supply closed or blocked (make sure the valves are open and the solenoid valves are not dirty). ② Water supply with low pressure (make sure that the minipool's supply pressure is between 1.5 and 3 bar). ③ Leaks in the bathtub's pipes (make sure that there are no leaks in the bathtub). <p>If the minipool does not reactivate after checking these possible problems (after having reset the control unit by disconnecting and reconnecting the power supply), contact the Manufacturer to request assistance.</p>
AL2 Water level timeout alarm (alarm)		<p>Problem description: the alarm is activated when the maximum level is not reached within 30 minutes from the minimum to the maximum sensor both during the filling phase and during the recovery of the water level in the tank.</p> <p>Solutions: The alarm resets only by switching off the minipool and turning it back on after about 30 seconds.</p> <p>The main causes of what has been described are attributable to:</p> <ol style="list-style-type: none"> ① Water supply closed or blocked (make sure the valves are open and the solenoid valves are not dirty). ② Water supply with low pressure (make sure that the minipool's supply pressure is between 1.5 and 3 bar). ③ Leaks in the bathtub's pipes (make sure that there are no leaks in the bathtub). ④ Check that there are no water leaks in the drain of the minipool (make sure that there is no dirt in the drain valves).
AL3 Emptying timeout alarm (alarm)		<p>Problem description: when the minipool is being emptied, if the minimum level is not reached within 120 min the system stops, the display shows the fixed message "AL3".</p> <p>Solutions:</p> <ol style="list-style-type: none"> ① make sure that the drain is not obstructed and that the drain valves open correctly. ② Try switching off the minipool and then on again after about 30 seconds. <p>If the alarm does not reset contact the Manufacturer.</p>

5A EMPTYING THE MINIPOOL

In general it is good practice to empty the bathtub every **30 days**, brushing the bottom and surfaces of the minipool and performing an energetic disinfection of the pipes, using the products contained in the **SP1 CLEANING KIT**.

The frequency of this operation depends on many factors, for example more or less intensive use, outdoor or indoor installation, water quality, etc. If the minipool is installed outdoors, emptying must always be done at the end of the summer season, taking care to also empty the water supply system.



The minipool can be drained at any time, without people inside the minipool. It is advisable to always empty the minipool during maintenance and at the end of the season.

 Before emptying the minipool, especially if a shock treatment has just been performed, make sure that the values of disinfectants and additives are at normal values.

- To activate emptying use the keypad:
- ① Press the "OK" key for at least three seconds.
 - ② this provides access to a submenu page.
 - ③ Press the "EMPTY" key.

The display shows the icon  throughout the entire emptying operation, alternating with the temperature. During emptying of the bathtub, the only enabled function is chromatherapy. If it is necessary to refill the minipool, see the pertinent chapter on page 22.

 Do not leave the empty minipool in DIRECT SUNLIGHT. The surface temperature could rise above 80°C resulting in serious damage, including cavitation and the deformation of the surface and components. Damage caused by direct exposure to sunlight is not covered by the warranty. In such conditions place a cover (fixed or mobile) to protect the minipool.

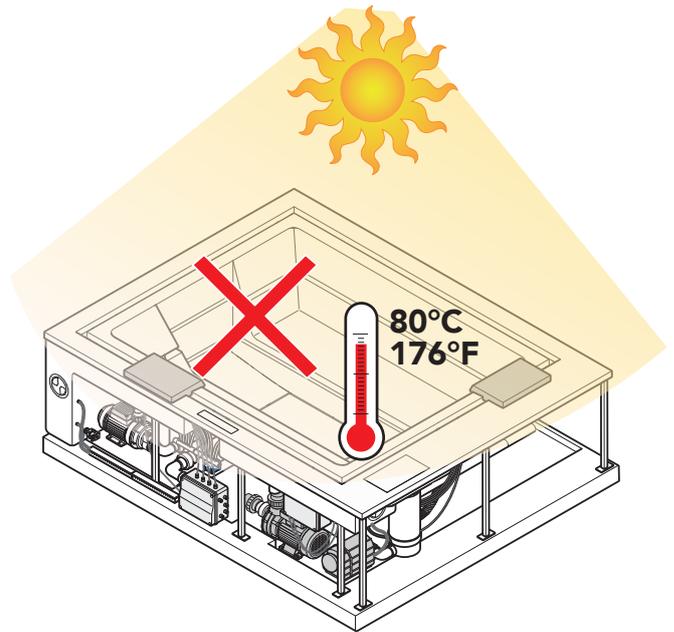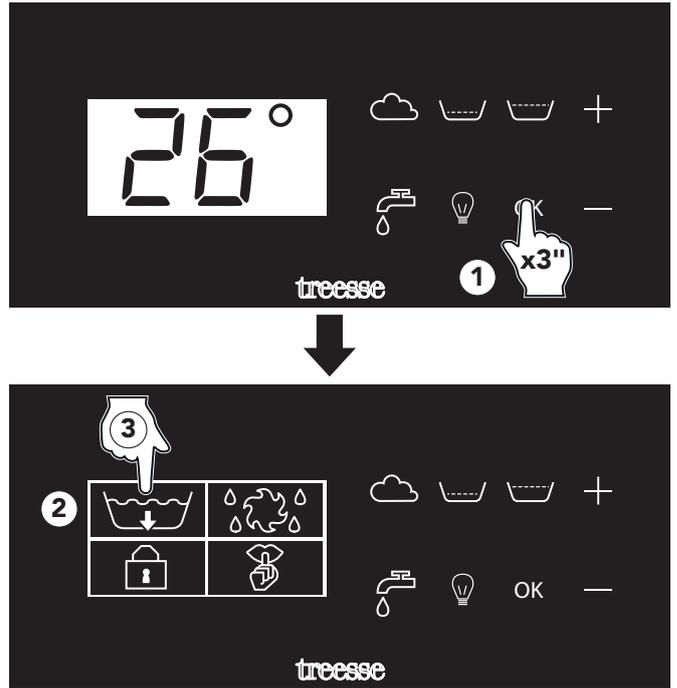

6A FILLING THE MINIPOOL

Perform a preliminary cleaning of the minipool using a bit of water and a mild detergent.

Do not use cloths or cleaners that are abrasive, aggressive or that contain solvents because they could irreparably damage the surface of the minipool.



Do not start any operation until the minipool has been completely filled, otherwise the minipool could be damaged.

Before filling, once again check the quality of the water supply. This is very important for the well-being of the users and for the long life of the minipool.

AUTOMATIC FILLING USING THE KEYPAD

Once the pool is powered, the display will show the word "tresse" and after a few seconds the display will show the current ambient temperature, and the various symbols on the keypad will be illuminated with white light.



Press the  key on the keypad to activate filling: filling in progress is indicated by the blue icon.

First the compensation tank is filled, and then - once the water has reached the maximum level inside the tank - the bathtub is filled through a recirculation pump, passing through the paper filter and the heater.


This cycle will be repeated many times until both the compensation tank and bathtub are filled. At this stage and until filling is completed, no other functions of the minipool - except chromatherapy - will be available.

During the filling phase, if the times for reaching the minimum (90 min) and maximum (60 min) levels in the overflow tank are not met, alarms "AL1" (minimum level) and "AL2" (maximum level) will be triggered, stopping

all operation.

In this case, you will have to disconnect the power and restore it after about 30 seconds using the product's main power switch and check the reason for this anomaly (leaky pipes, obstructed supply valves, insufficient pressure).

During the use of the minipool the system automatically maintains the water level flush with the edge of the bathtub.

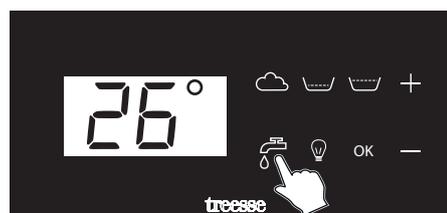

Automatic filling using the keypad pressing the key activates the automatic filling of the minipool, controlled by two level sensors.



More information

MAINTAINING THE WATER LEVEL IN THE MINIPOOL

When the minipool is completely filled a maximum sensor (SL2) and a minimum sensor (SL1) continuously monitor the water level inside the compensation tank.

SL1 (minimum sensor) = 0, the sensor does NOT detect water

SL1 (minimum sensor) = 1, the sensor detects water

SL2 (maximum sensor) = 0, the sensor does NOT detect water

SL2 (maximum sensor) = 1, the sensor detects water

If the lack of water is minimal (e.g., evaporation or a person gets out):

- The minimum sensor still detects water (SL1 = 1).
- The maximum sensor does not detect water (SL2 = 0).
-  activates automatic filling until conditions are restored and for a maximum of 60 minutes.

If the lack of water is considerable (e.g., two or more people get out of the minipool):

- Both the minimum and maximum sensors do not detect water (SL1 = 0, SL2 = 0).
-  The recirculation pump moves the water from the compensation tank to the minipool.
- The minimum sensor detects water (SL1 = 1, SL2 = 0).
-  activates automatic filling until conditions are restored and for a maximum of 60 minutes.

Use


Zen Active SP1 minipool



2B MINIPOOL FUNCTIONS

U

- 1 - Control panel
- 2 - Overflow edge
- 3 - Pillow
- 4 - Whirlpool
- 6 - Lymphodraining whirlpool
- 7 - Filling / draining plate

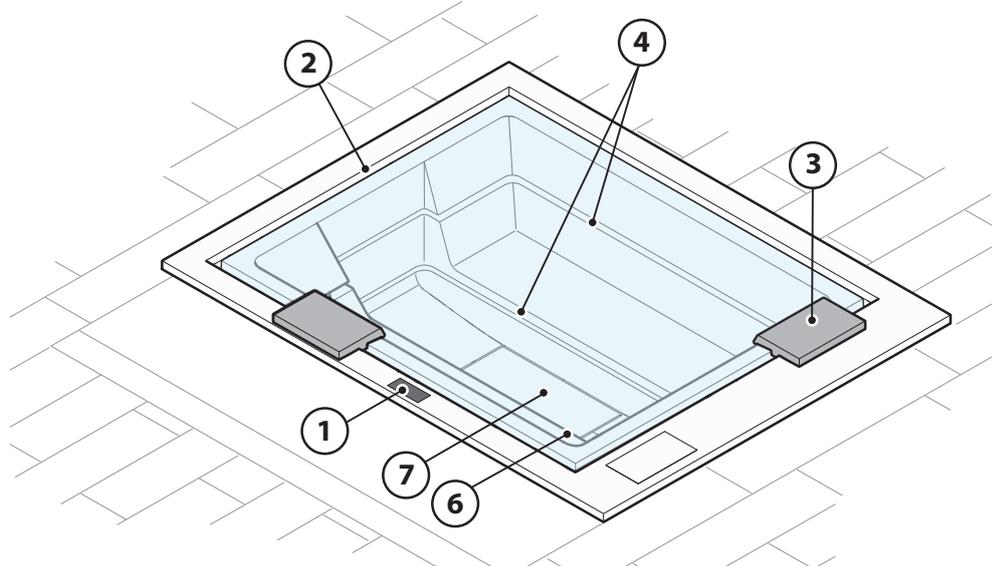

The minipool must ALWAYS remain connected to both the electrical grid and plumbing (filling and draining): this is necessary for filtering, cleaning the filters and maintaining the minipool's water levels and temperature. ALWAYS cover the minipool when inactive. This protects it from the sun's rays, prevents dirt from accumulating inside the bathtub and keeps it from losing heat, thus optimising the efficiency of the heater.

FILLING THE MINIPOOL


Filling is carried out by following the figures on the side (follow the instructions for your keypad).

This occurs through a concealed spout in the compartment on the bottom of the minipool and is indicated by the illuminated red LED.

Filling takes place from the bottom of the bathtub, and once it has finished the tank is filled.


After reaching the correct level, the system automatically stops the filling and makes available the functions of whirlpool, recirculation, ozone and heater.

During use of the minipool the system automatically maintains the water level equal to the edge of the bathtub.

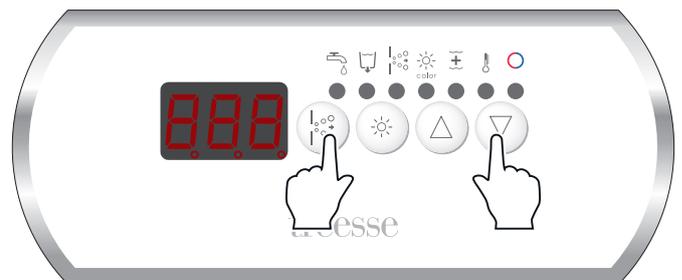

Automatic filling using the keypad

simultaneously pressing the  and  keys activates the automatic filling of the minipool, controlled by two level sensors and confirmed by the "FILL" LED

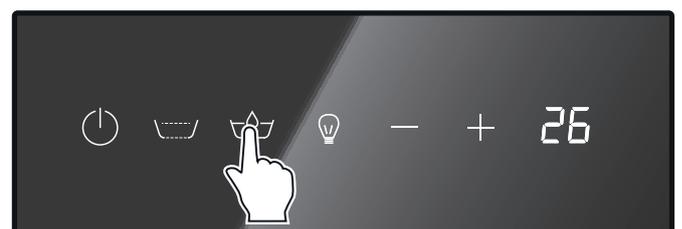


Automatic filling using the keypad pressing the key activates the automatic filling of the minipool, controlled by two level sensors and confirmed by the fixed blue key.

MIXING FUNCTION



Treesse minipools feature an automatic mixing function during which the whirlpool and blower pumps are activated.

This process is used to mix the water in the bathtub to have a more effective filtering action.

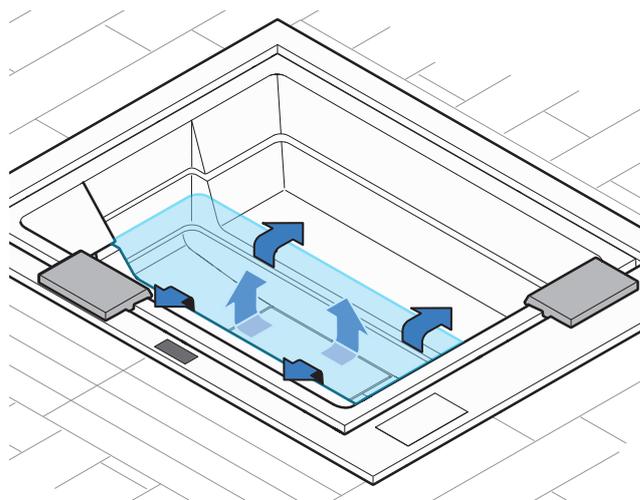


PERIMETER WHIRLPOOL (BACK AND LEGS)

This minipool is equipped with the patented GHOST SYSTEM® whirlpool, a system that is truly invisible, which allows for extremely simple design solutions for bathtubs that are completely free of external nozzles and jets. GHOST SYSTEM®, an exclusive patent of Treesse Group, owes its name to the invisibility of the components, fully incorporated in the bathtub. The system is distinguished by two thin internal perimeter slots that host a large number of jets that are properly oriented.



For this operation see page 14.

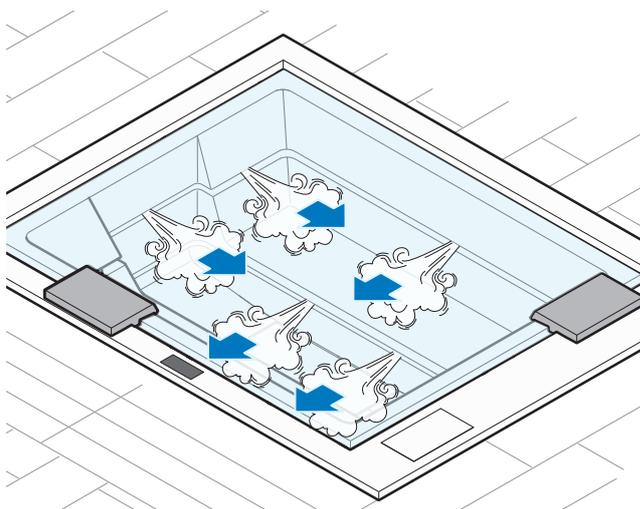


CHROMATHERAPY

Chromatherapy is optional both on the infinity version and the version with two perimeter slots. The light "magically" moves the whirlpool in the bathtub.



For this operation see page 14.

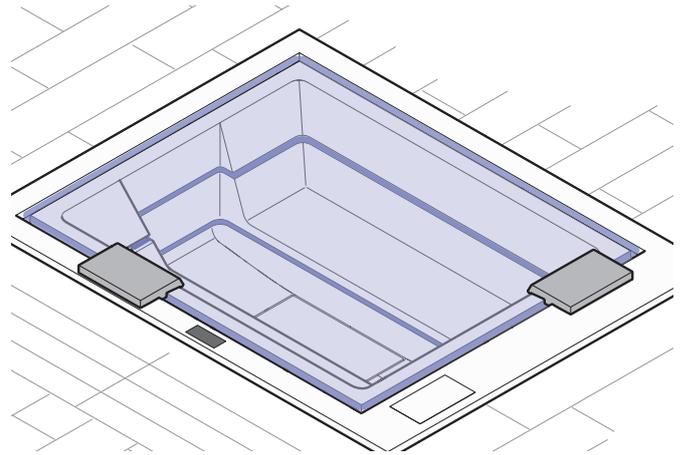**OVERFLOW EDGE**

The overflow edge of the minipool collects excess water and conveys it to the collection tanks under the bathtub. The water level is always constant, allowing for relaxation and a total wellness experience. The water that overflows is recovered, filtered and automatically recirculated within the minipool through the intake grille.




The minipool works exclusively when the bathtub and tanks are full of water.



The edge is designed to recover the overflowing water, not for abnormal movements caused by an improper use of the minipool (e.g., diving).


In this regard we strongly recommend entering the bathtub and getting in the water slowly. When the recirculation of the water overflow is active, the heater automatically activates to manage the water temperature.

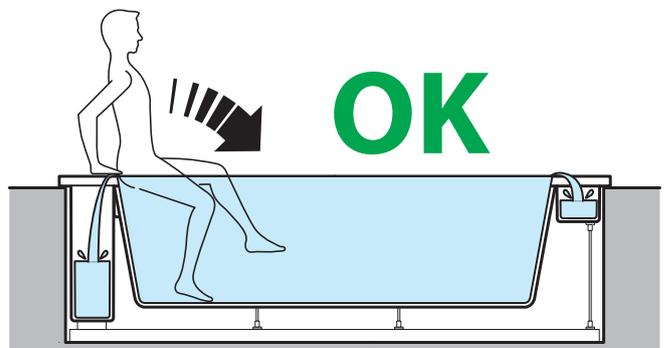**DRAIN AND SUCTION PUMPS**

The minipool drain is positioned on the bottom, hidden by the finishing plate. This solution makes the use of the bathtub safer and more comfortable. To clean the drainage grate, just manually remove the finishing plate since it is simply resting on the bottom.



For this operation see page 14.

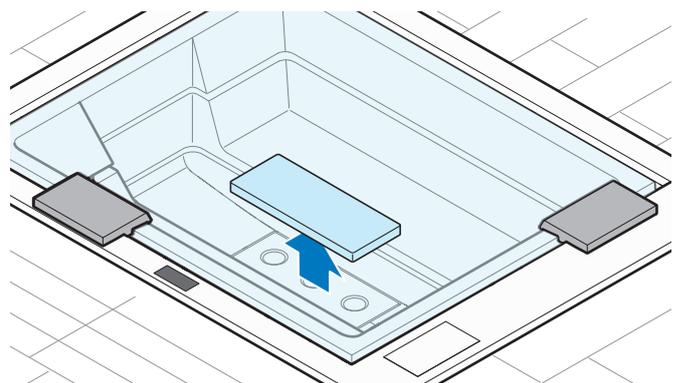


3B CONTROL PANEL: HOW TO USE IT

WHITE KEYPAD

LED chromatherapy active
 LED whirlpool active
 LED emptying in progress
 LED filling in progress

LED sanitising (ozone) active
 LED heating active
 LED temperature adjustment

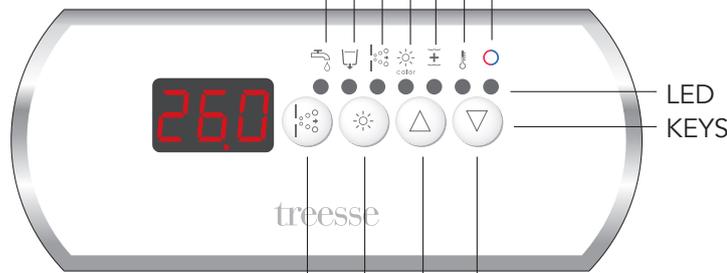

KEY COMBINATIONS

+ = *FILL bathtub*

+ = *EMPTY bathtub*

+ = *switch from ACTIVE mode to STANDBY*


value decrease key (DOWN)
 value increase key (UP)
 chromatherapy activation key
 whirlpool activation key

BLACK CAPACITIVE KEYPAD

chromatherapy activation key
 WHITE: chromatherapy NOT active
 BLUE: fixed colour
 FLASHING: colours in sequence

bathtub fill/empty key
 WHITE: NOT active
 BLUE: filling in progress
 FLASHING: emptying in progress

whirlpool activation (brief press)
 WHITE: NOT active
 BLUE: whirlpool in progress

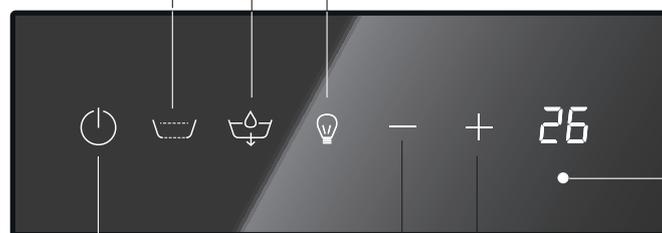

key to start/stop sleep mode
 WHITE: sleep mode NOT active
 BLUE: sleep mode active

hidden key, not visible but active: to empty the bathtub, press it for three seconds and then press the fill/empty key

value increase key (UP)
 value decrease key (DOWN)

OPERATIONAL FUNCTIONS

WATER TEMPERATURE SETTING




When turned on, the last temperature set by the user is recalled, which can be seen by pressing the "+" or "-" key.

To change it, press the "+" or "-" keys: this will increase/decrease the displayed temperature by +/- 0.5°C.

After three seconds of inactivity, the display will return to standby and the new temperature will be entered.

WHIRLPOOL

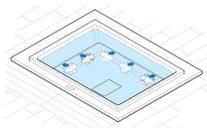

The **whirlpool** is started by:



pressing the  key
whirlpool in progress is indicated by the  LED




pressing the  key
whirlpool in progress is indicated by the fixed blue key

The function can only be activated when the water is at operational level.

When EMPTYING, the whirlpool is deactivated.

If not interrupted from the keypad, the function will be deactivated automatically after 20 minutes.

CHROMATHERAPY

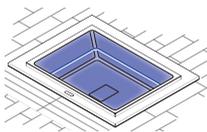

Chromotherapy is started by:



pressing the "Light" key 



pressing the "Light" key 

Activates a sequence of 16 colours that vary in an automatic sequence.*

During the sequence, pressing the "Light" key again stops on the current colour (e.g., Red): the sequence is interrupted and remains fixed on the chosen colour.

If you want to change this colour, by repeatedly pressing the "Light" key you can run through all the colours to choose a different one.

Once you have selected a fixed colour, to return to the automatic sequence you must turn off and reactivate the function.

Hold the "Light" key for two seconds to turn off the function. If not switched off manually, the function stops automatically after three hours.

The function can always be activated, even if the water level is low.

* Colour sequence: White, Red, Orange, Yellow 1, Yellow 2, Yellow 3, Green 1, Green 2, Green 3, Blue 1, Blue 2, Blue 3, Blue 1, Blue 2, Blue 3, Purple.... White, Red, etc.

SPECIAL FUNCTIONS	
HEATER OZONATOR	<p>Automatic functions</p> <p>Heater The heater is automatically activated when the water temperature in the minipool is one degree lower than the value set with the control panel. If not already active, the recirculation pump is automatically activated.</p> <div style="display: flex; justify-content: space-between;"> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> </div> <p>if the heater is operating the  LED is active</p> <hr/> <div style="display: flex; justify-content: space-between;"> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> </div> <p>if the heater is in operation, a dot flashes on the bottom right of the display</p> <p>Ozonator The ozonator is activated by the circulation pump and turns off automatically during the WHIRLPOOL function.</p> <p>When the ozonator is operating the  LED is active (white keypad).</p>

4B ALARMS

If any alarms appear during initial startup, read the instructions provided in the following table. If the solution is not possible, immediately contact the Manufacturer to request technical support.

In the meantime, do not try to repair or use the minipool but rather disconnect it from the electricity and water supplies.

ALARMS NOTIFICATIONS	Screen displayed	DESCRIPTION OF THE PROBLEM POSSIBLE SOLUTIONS
<p>$H_i - 43$ Temperature alarm (notification)</p>		<p>Problem description: if the water temperature in the minipool exceeds 42°C all the functions are deactivated, the display shows the "HI" message alternating with the temperature value. Solutions: the alarm and the system will automatically reset when the temperature drops. If the alarm does not reset contact the Manufacturer.</p>
<p>E_r Temperature sensor alarm (alarm)</p>		<p>Problem description: a temperature sensor measures the water temperature inside the minipool, activating the heater when necessary. The allowed water temperatures range from 5°C to 45°C. Values outside the range cause the blocking of all functions and the permanent activation of the alarm message. Solutions: the alarm will reset automatically once the temperature returns to allowed values (5° to 45°). The message is also displayed if the temperature sensor malfunctions. Solutions: make sure that the water temperature is not outside of the permitted values, try to disconnect the power supply to the bathtub and switch it on again after 30 seconds. If the problem persists, verify that the connection with the control unit is correct and has not been tampered with. Otherwise contact the Manufacturer.</p>
<p>FL No flow ("FL" alternating with the temperature) (notification)</p>		<p>Problem description: When the recirculation is active but the flow switch does not detect flow for five continuous seconds, the heater is disabled, the recirculation pump remains active for five minutes, after which it switches off, the display shows the message "FL" alternating with the temperature. Solutions: turn off the bathtub and clean the filters. Make sure that the recirculation pump works perfectly. Otherwise contact the Manufacturer. If the problem persists, all functions are disabled and the display shows the fixed "FL" alarm (filter blocked).</p>
<p>FL Filter blocked ("FL" fixed message) (alarm)</p>		<p>Problem description: the alarm occurs when the lack of flow condition persists for more than five minutes. The system stops, all functions are disabled and the display shows the fixed "FL" alarm. Solutions: The alarm resets only by switching off the minipool and turning it back on after about 30 seconds. The main causes of what has been described are attributable to:</p> <ol style="list-style-type: none"> ① Excessive dirt in the filter due to incorrect treatment of the minipool water (see the Use and maintenance manual in the section Water treatment on page 37). Turn off the minipool and clean the filter. ② Damage to the flow sensor (contact the Manufacturer). ③ Damage to the circulation pump. Once the minipool restarts, verify that the circulation pump functions correctly.

ALARMS NOTIFICATIONS	Screen displayed	DESCRIPTION OF THE PROBLEM POSSIBLE SOLUTIONS
<p>Co</p> <p>Water control unit alarm</p> <p>(notification)</p>		<p>Problem description: in case of no communication with the chromotherapy controller, the system disables the function and the display shows the "Co" message alternating with the temperature.</p> <p>The other functions remain available.</p>
<p>LL</p> <p>Water level alarm</p> <p>(notification)</p>		<p>Problem description: the notification is activated if the water level inside the compensation tank is below the minimum for more than three seconds. The display will show the message "LL" alternating with the temperature, the functions remain enabled, the system will start filling the minipool to restore the level (see the section on filling the minipool on page 34)</p> <p>The notification is activated when a number of people leave the bathtub at the same time (the system automatically restores the level by activating the fill function).</p>
<p>FEr</p> <p>Water level sensors alarm</p> <p>(alarm)</p>		<p>Problem description: the alarm is activated if there is a malfunction of the level sensors, especially when the system detects the maximum level but not the minimum level.</p> <p>Solutions: try to reset the system by cutting off power to the bathtub for about 30 seconds, check that the level sensor cable is not damaged (e.g., crushed by something), restore power to the minipool. If the problem persists, contact the Manufacturer.</p>

5B EMPTYING THE MINIPOOL

In general it is good practice to empty the bathtub every **30 days**, brushing the bottom and surfaces of the minipool and performing an energetic disinfection of the pipes, using the products contained in the **SP1 CLEANING KIT**.

The frequency of this operation depends on many factors, for example more or less intensive use, outdoor or indoor installation, water quality, etc.

If the minipool is installed outdoors, emptying must always be done at the end of the summer season, taking care to also empty the water supply system.

 Before emptying the minipool, especially if a shock treatment has just been performed, make sure that the values of disinfectants and additives are at normal values.


*The minipool can be drained at any time, without people inside the minipool.
It is advisable to always empty the minipool during maintenance and at the end of the season.*

 Do not leave the empty minipool in DIRECT SUNLIGHT. The surface temperature could rise



above 80°C resulting in serious damage, including cavitation and the deformation of the surface and components.

Damage caused by direct exposure to sunlight is not covered by the warranty.

In such conditions place a cover (fixed or mobile) to protect the minipool.

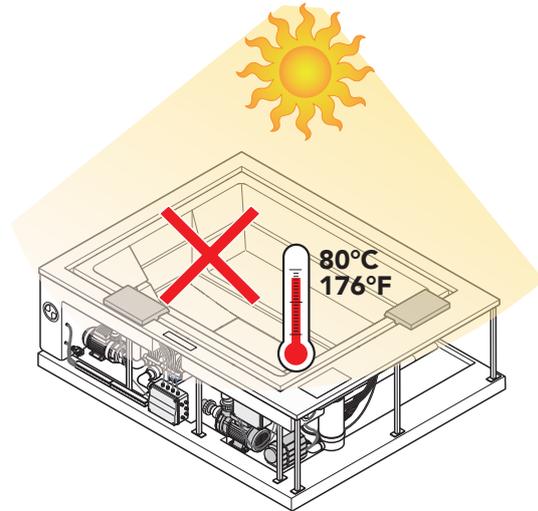

HOW TO EMPTY

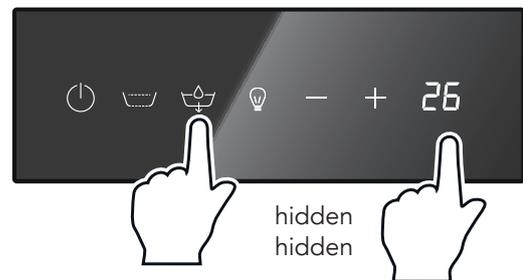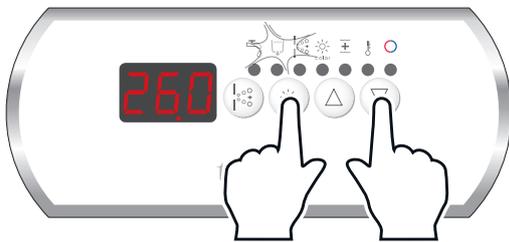

To avoid accidental emptying of the bathtub, a combination of two keys is required to perform this operation:

 → simultaneously press the  and  keys 
emptying in progress is indicated by the "EMPTY" LED

 → pressing the hidden key for three seconds (located below the display, even if it is not visible it is still active), then press the  key
emptying in progress is indicated by the flashing blue key

Emptying lasts about 120 minutes and for the entire duration the bathtub needs to be powered to allow it to completely drain all residual water from the tank, pipes and filter.

During emptying of the minipool, the only enabled function is chromatherapy.

If it is necessary to refill the minipool, see the pertinent chapter on page 34.

6B FILLING THE MINIPOOL

Perform a preliminary cleaning of the minipool using a bit of water and a mild detergent.

Do not use cloths or cleaners that are abrasive, aggressive or that contain solvents because they could irreparably damage the surface of the minipool.



Do not start any operation until the minipool has been completely filled, otherwise the minipool could be damaged.

Before filling, once again check the quality of the water supply. This is very important for the well-being of the users and for the long life of the minipool.

AUTOMATIC FILLING USING THE KEYPAD

Once the pool is powered, the display will show the word "FxxRxx" and after a few seconds the display will show the current ambient temperature.

Filling is carried out by following the figures on the side (follow the instructions for your keypad).

Filling takes place from the bottom of the bathtub, and once it has finished the tank is filled.


After reaching the correct level, the system automatically stops the filling and makes available the functions of whirlpool, recirculation, ozone and heater.

At this stage and until filling is completed, no other functions of the minipool - except chromatherapy - will be available.

During the filling phase, if the times for reaching the minimum (90 min) and maximum (60 min) levels in the overflow tank are not met, alarms "AL1" (minimum level) and "AL2" (maximum level) will be triggered, stopping all operation. In this case, you will have to disconnect the power and restore it after about 30 seconds using


the product's main power switch and check the reason for this anomaly (leaky pipes, obstructed supply valves, insufficient pressure).

During the use of the minipool the system automatically maintains the water level flush with the edge of the bathtub.

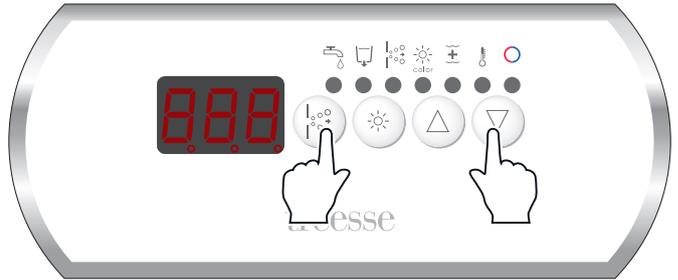

Automatic filling using the keypad


simultaneously pressing the  and  keys activates the automatic filling of the minipool, controlled by two level sensors and confirmed by the "FILL" LED

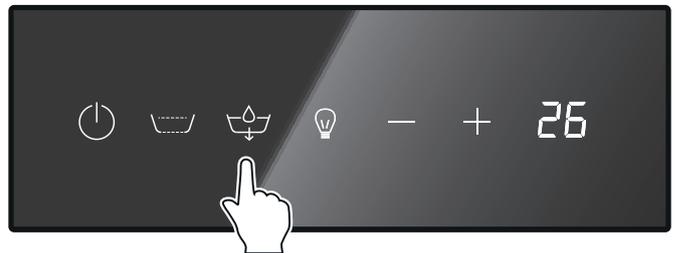

Automatic filling using the keypad pressing the key activates the automatic filling of the minipool, controlled by two level sensors and confirmed by the fixed blue key.

treesse

water treatment
and
maintenance

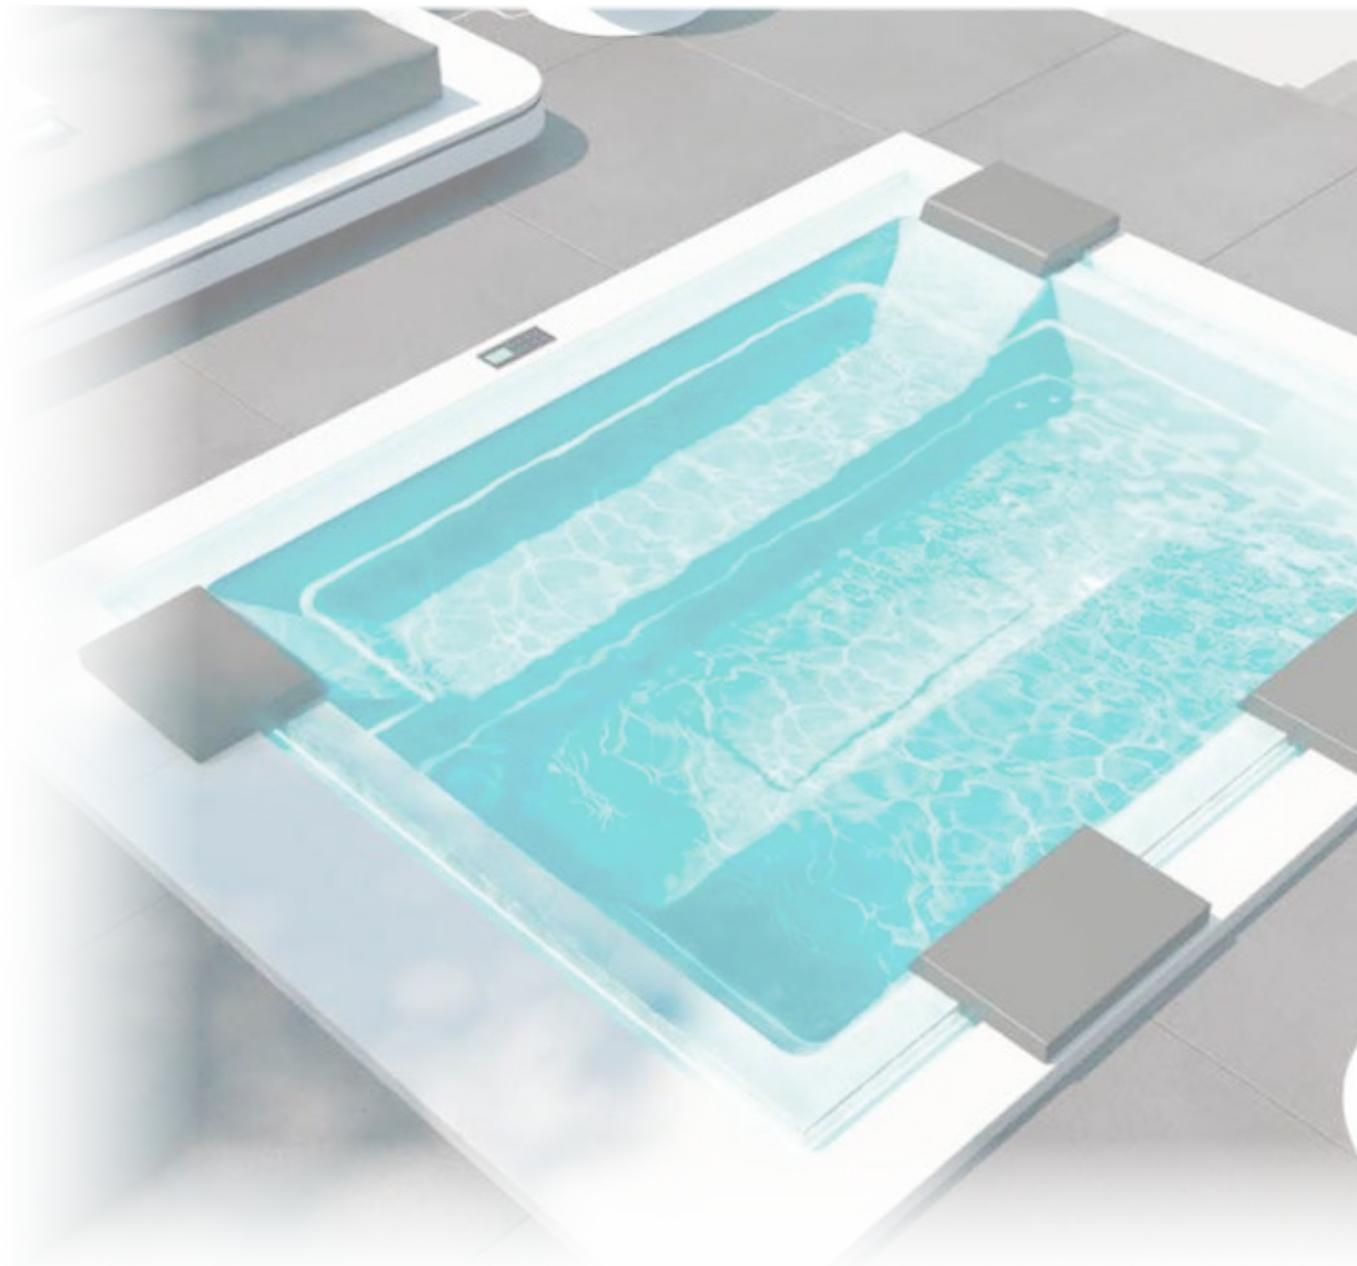

INTRODUCTION

Minipool water that is always clean and clear, but above all bacteriologically pure and free of algae, guarantees safety and comfort for users and offers the pleasure of a safe, relaxing bath.

The pool water must always be disinfected and disinfected and have a residual disinfectant content ready to eliminate any new contaminants that may be brought into the bathtub by people or the environment.



The Manufacturer recommends the use of its products as they are tested and compatible with the construction materials. The use of different products may cause damage to surfaces over time that is not covered under warranty.

The best disinfectant is **bromine**, as it is heat resistant. The product comes in 20 g slow-release tablets. It performs its maximum sanitising action in water with a pH value between 7.4 and 7.8. The use of bromine is combined with **ZERO PROBLEM antialgae** and **OXIGEN ATTIVO GR granular oxygen**. Oxygen has its own disinfecting power and serves to reactivate bromine when the active disinfecting bromine is transformed into combined bromine. Furthermore, the natural increase in water pH is inhibited.

It is always important to use high quality specific products and to check chemical parameters, in particular the pH and the level of disinfectant. There are specific kits for measuring these parameters.

In addition to chemical products, it is necessary to remember that the bottom and sides of the bathtub should be thoroughly brushed and the filtration system left running for an adequate number of hours per day to allow the removal of suspended water pollutants.

Two simple but fundamental operations should be carried out on a regular basis:

1 Check the fundamental water parameters (pH, hardness, alkalinity) - page 37

If the three parameters are not perfectly balanced, larger quantities of additives and disinfectants may be needed followed by maintenance.

For example, an excessively alkaline water makes it difficult to keep the pH stable. In turn, an unstable pH fosters the formation of algae and therefore requires the use of algaecides in quantities higher than normal.

These parameters are measured by using test strips that are easily found in specialised shops. If necessary, it is possible to use specific products to bring them back to optimal values.

2 Disinfection and water cleaning - page 41

A very important operation for the hygienic and user comfort: products are added to the water that can eliminate bacteria and fungi (disinfectants like oxygen or bromine) and make it more clear and crystalline (additives like algaecides, anti-foam, flocculants, etc.). Water should be checked periodically to see if the concentration of disinfectants and additives is sufficient to guarantee their effectiveness.

These two operations must be done very **frequently**, taking into account the more or less intensive use of the minipool, the number of users and the quality of the water used. Other actions, like the emptying of the minipool, are **occasional** and should be done only when needed.



It is recommended to have your minipool checked at least 1-2 times per year (for example at the end and beginning of the season for outdoor installations) by contacting the Manufacturer's service centres. This will guarantee excellent performance and durability over time, especially in the case of very intensive use.

The suggestions on the following pages only cover some general aspects. If there are problems or special needs, contact the manufacturer for suggestions.

TABLE OF ACTIVITIES

Below is a table that summarises all the activities necessary for proper maintenance. Those in blue should be carried out frequently.

ACTIVITY	INFORMATION	FREQUENCY...
CHECK PH VALUES, HARDNESS AND ALKALINITY	1 page 37	<p>Why check: Minipool water that is always clean and clear, but above all bacteriologically pure and free of algae, guarantees safety and comfort for users and offers the pleasure of a safe, relaxing bath.</p> <p>How often: the minipool water (both its basic parameters and the concentration of disinfectants and additives) should be checked 1 - 2 times a week under normal conditions of use (e.g., family use) or daily if the minipool is used intensively (e.g., wellness centres) or if it is installed outdoors. In this latter case, check the water especially after intense rain.</p>
DISINFECTION AND CLEANING OF THE WATER (FROM POLLUTANTS AND ALGAE)	2 page 41	<p>Which products to use: reactive strips or tablets, liquid reagents or instruments for measuring the parameters are readily available in specialised shops.</p> <p>For a disinfectant, the Manufacturer recommends its products (bromine - 20 g slow-release tablets - combined with the use of ZERO PROBLEM antialgae and OXIGEN ATTIVO GR granular oxygen).</p> <p>If algae has already developed in the bathtub, the problem should be solved as soon as possible, emptying the minipool, brushing the walls and bottom of the bathtub thoroughly and performing a shock treatment with liquid oxygen (OXI BLU).</p>
CLEANING/REPLACING THE PAPER FILTER	3 page 45	<p>Why check: the paper filter is a cylinder-shaped cartridge, mainly consisting of cellulose and polyamide.</p> <p>The water in the minipool enters the filter through a hole and comes out from another, filtered and cleaned thanks to the cartridge within, capable of retaining even very fine dust.</p> <p>How often: Cleaning/replacing the paper filter depends on how often the minipool is used. In general, rinse the cartridge every 2-3 weeks and replace it with every change of water.</p> <p>Which products to use: for cleaning just remove the cartridge from the filter and wash it with a jet of clean water to remove hair and other foreign substances. For a deeper cleaning, leave the cartridge immersed in a solution suitable for cleaning this type of filter, possibly overnight. In any case refer to the instructions provided by the manufacturer of the cleaning product used.</p>
EMPTYING AND FILLING THE MINIPOOL	4 page 21 5 page 22	<p>How often and which products to use: the frequency of this operation depends on many factors, for example more or less intensive use, outdoor or indoor installation, water quality, etc.</p> <p>In general it is good practice to empty the bathtub every 30 days by performing an energetic disinfection of the pipes, using the products contained in the SP1 CLEANING KIT.</p>
CLEANING THE SURFACES	6 page 47	<p>How often and which products to use: cleaning the bathtub is an important operation that should be carried out frequently (at least twice a week), by brushing the walls and the bottom of the bathtub. It is also essential to sterilise the pipes and the recirculation system, an operation that can be easily carried out before emptying the pool with the products contained in the SP1 CLEANING KIT.</p> <p> <i>The Manufacturer recommends the use of its products as they are tested and compatible with the construction materials. The use of different products may cause damage to surfaces over time that is not covered under warranty.</i></p>

1 CHECKING THE WATER PARAMETERS

Specific studies on water balance have found a correlation of equilibrium among the values of **pH**, **hardness**, **alkalinity**: they must therefore be **measured** frequently and then **balanced**.

Remember that:

- The **pH** must be between **7.4-7.8** to allow the bromine disinfectants to be most effective and long lasting.
- The optimal **alkalinity** is in the range of **8-12.5°F**.
- The **hardness** should not exceed **25°F**. It can be kept under control with sequestering agents specific or limescale.

Only their perfect balance will guarantee water that is clean, clear and low maintenance.

CONVERSION TABLE

°D = German degrees
 °f = French degrees
 ppm CaCO₃ = American degrees (parts per million)
 mg/l = milligrams per litre
 g/m³ = grams per cubic metre
 1 °D = 17.8 ppm CaCO₃
 1 °D = 1.78 °f
 1°f = 0.56 °D
 1°f = 10 ppm CaCO₃



More information

TAP WATER AND WELL WATER

To ensure maximum hygiene and durability of the minipool it is essential to pay close attention to the quality of the water used.

Tap water guarantees microbiological purity and is free of metal particles (not retained by the paper filter) and organic substances. In contrast, well water often contains traces of oxides, organic substances and bacteria that can cause algae blooms and serious damage to the minipool.

WATER HARDNESS

Water hardness is determined by the amount of calcium and magnesium salts dissolved in the water.

Water classification:

.....up to 7°f	=	Very soft water
From 7°f to 14°f	=	Soft water
From 14°f to 22°f	=	Slightly hard water
From 22°f to 32°f	=	Fairly hard water
From 32°f to 54°f	=	Hard water
.....more than 54°f	=	Very hard water

(1°f = 10 mg calcium carbonate per litre of water)

WATER ALKALINITY


Alkalinity represents the quantity of some alkaline substances (carbonates, bicarbonates, hydrates) dissolved in water. Values lower than 80 mg/l or higher than 125 mg/l can alter the pH uncontrollably making maintenance of the water quality very difficult.

WATER PH

What is pH?

The pH indicates the concentration of hydrogen ions (H⁺) in the water and represents its acidity or alkalinity. Maintaining the pH within optimal values (**7.4-7.8** - neutral value) allows for:

- Wellness for users (the pH of the skin, mucous membranes and eyes is slightly acidic, close to 7, so this value meets this need)
- Duration of the minipool itself
- The best performance of water treatment products, resulting in lower consumption.

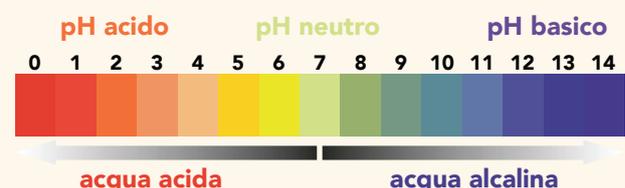

The optimal values for incoming water are highlighted in the table: the three fundamental water parameters (pH, hardness and alkalinity) are frequently measured and then balanced using specific products, readily available in specialised stores.



Minipools installed outdoors or subject to intensive use require more frequent checks of the three parameters as they are subject to the weather (e.g., heat from the sun and rain) and organic substances carried into the water by users.

PARAMETER	OPTIMAL VALUES between...	VALUES ABOVE OR BELOW CAN...
HARDNESS (TH)	between 10°F and 25°F (100 mg/l-250 mg/l)	...cause build-up that over time can cause significant damage to the walls of the minipool, the pipes, the filters, as well as the heating unit and pumps. Very hard waters are conducive to the proliferation of algae.
pH	for bromine treatments it is recommended to keep the pH in the range 7.4 to 7.8	...irritation of the eyes and skin of people in the water, water with little sanitising power, excessive consumption of chemicals, decrease in the duration of the minipool components.
ALKALINITY (CAT)	between 80 and 125 mg/l (8-12.5°F)	...more likely uncontrollable changes in pH

 The unit of measurement of hardness is °f (French degree), where one degree represents 10 mg of calcium carbonate (CaCO₃) - limestone - per litre of water (1°f = 10 mg of calcium carbonate per litre of water). The simplest means to measure hardness is to use a reagent in drops or soluble tablets - readily available in specialised stores - and follow the instructions attached to the product. During pre-installation/installation of the minipool, if the water hardness was not optimal the installer should have added a water softener.

 The simplest way to measure pH is to use a reagent (usually rossophenol is used) in drops or soluble tablets, readily available in specialised stores. When placed in contact with the water to be analysed, it takes on a colour ranging from red (pH 8.4) to yellow (pH 6.8). By comparing the colour with colour tables one can quickly identify the pH of the water. *If the pH is found to be lower or higher than optimal, it is necessary to use an acidity/basicity adjuster, easily available in specialised shops or by contacting the Manufacturer. For the quantities follow the product's instructions. Regardless of the formulation used, it is recommended to spread the product in different parts of the minipool to avoid creating excessive concentrations.* The pH should usually be checked 1 - 2 times a week under normal conditions of use (e.g., family use) or daily if the minipool is used intensively (e.g., wellness centres) or if it is installed outdoors. In the latter case, check the pH of the water after each storm.

 The alkalinity value is determined by the following chemical compounds present in the water: carbon dioxide, carbonates, bicarbonates and hydrates. It is very important to stabilize the total alkalinity value as it also influences the pH. The alkalinity is found using the appropriate test kits that are readily available in specialised shops. Alkalinity can vary:

- Adding dry acid to the bathtub (to lower it).
- Adding sodium bicarbonate to the bathtub (to increase it).

2

DISINFECTION AND CLEANING OF THE WATER

Various micro-organisms (bacteria, fungi, algae) can proliferate in the water of the minipool, fostered by the constant heat of the water.

Only some of them can be a real danger for those who use the minipool, however these micro-organisms can proliferate quickly making the water cloudy and the surfaces slippery.

There are essentially two types of treatments to be carried out:

2A Disinfection (oxygen or bromine).

2B Water cleaning (anti-algae, flocculants, etc.).

The products must be requested from the Manufacturer. For methods of use carefully follow the product's instructions.



The use of chlorine for the disinfection of the minipool is strongly discouraged as it is not suitable for the construction material (stratified resin) and not very stable at high temperatures.



When using multiple additives avoid using them at the same time (try to schedule the activities 2-3 days apart) and note their compatibility: read the information labels or request information from the product dealer.



After performing the treatments - only when there are no people in the water - activate the whirlpool function for 20 or 30 minutes and do not use the minipool until the disinfectants/additives have dropped to normal values.



Frequently check the concentration of additives in the minipool water (test strips are readily available). Some are sensitive to the action of the sun's rays or are diluted by rain or the organic substances left in the water by users.



The frequency of disinfection also depends on the intensity of use of the minipool. If it is used in public areas (e.g., wellness centre), the water must be checked and disinfected on a **daily basis** by specialised and trained personnel.

2A

DISINFECTION

(ELIMINATION OF THE BACTERIAL AND FUNGAL LOAD)

For a complete sanitisation of the water we recommend the use of **bromine** with reactivation using **granular oxygen**.

Oxygen treatment (domestic use)

This method of sanitisation is ideal for domestic use, i.e., when the minipool is used by a limited number of people for non-prolonged periods. It naturally creates crystalline water and is less aggressive towards the skin and hair, it does not have an unpleasant odour and does not alter the pH of the water.

Usually oxygen-based treatments combine two components: oxygen tablets and a liquid activator.

Bromine treatment (intensive use)

Bromine is a halogen and should be added to water at pre-established intervals (usually in the form of water-soluble tablets).

Unlike chlorine, bromine is also effective at high temperatures and with higher pH.

Not producing chloramines, it does not cause unpleasant odours, does not irritate the eyes and skin and is easily reactivated.



More information

SUPER-DISINFECTION (SHOCK TREATMENT)

This operation is an intensive disinfection treatment that consists in adding a quantity of disinfectant to the water that is slightly higher than what is used normally in order to oxidise the organic substances and eliminate the micro-organisms and algae.

The frequency is variable: it becomes indispensable if the minipool remains unused for a long time, but it can vary if it is used intensively, if it is installed outdoors because it is more exposed to pollutants and to the sun's rays.

In general, the minipool used by a family needs super-disinfection every 15 days, if used by a wellness centre at least once a week.

After completing the treatment, do not use the minipool until the value of the disinfectant has dropped to normal values.

Shock treatment can be performed using the product **OXI BLU**, made with stabilised liquid oxygen.

2B CLEANING THE WATER

The following is a list of some possible treatments: the choice of formulation (liquid, granules, tablets, etc.) and the frequency of use should depend on your needs, the position of the minipool (outdoor or indoor) and the water quality.

Elimination of algae

Algae are single or multi-celled organisms that can form in minipools if the water is not properly disinfected. They are born from spores introduced by the environment, and if they enter water that has not been disinfected they can quickly reproduce, covering the entire bathtub. In addition to turning the water an unsightly green colour, the algae make the walls and the bottom of the pool slippery and therefore dangerous, staining them in a permanent manner. Green algae are the most common, but there are also others that are black, red or yellow.

An effective anti-algae product (**ZERO PROBLEM**) prevents the growth of algae in the minipool, particularly if it is installed outdoors and therefore exposed to long periods of sunlight. For more information on how to use the disinfectant and its dosages follow the instructions on the product's label.

If **algae has already developed in the bathtub**, the problem should be solved as soon as possible, emptying the minipool, brushing the walls and bottom of the bathtub thoroughly and performing a shock treatment with liquid oxygen (**OXI BLU**).

Flocculation treatment

Flocculation, as a support for filtration, is carried out to remove microscopic suspensions from the minipool water as they may cause cloudiness (e.g., suntan oil, lotions, cosmetics, etc.).

Flocculant is a product that, when in contact with water, is hydrated and increases its volume. The hydrated molecules "bind" to each other to create cross-linked flakes.

If you use this product, check the filter often.

Anti-foam treatment

Anti-foam products added to the water in the minipool reduce the formation of foam following the introduction of soaps, personal detergents, suntan oils or other substances.

Organic/inorganic sequestering agent

Chemical products specifically for reducing the problems associated with the presence of metals (iron, manganese) like limescale build-up and colours of water otherwise difficult to resolve. Only to be used if the content of these metals is not too high, otherwise find an alternative source of supply water.

Anti-fat treatment

Useful for removing fat deposits from the water in the minipool (e.g., sweat, tanning creams, etc.) that can cloud the water.

Anti-limescale treatment

The main problem of water hardness is the risk of precipitation of calcium carbonate with consequent build-up in all sections of the system and the minipool.

The solubility of calcium carbonate is influenced greatly by pH: the higher the pH the greater the risk of precipitation.

Anti-limescale additives prevent the deposit of limescale on the surfaces of the bathtub, keeping the pipes, pumps, heat exchangers and filters clean.

They also prevent the formation of stains in the bathtub due to the iron present in the water.



More information

OZONE

TRESSE minipools come standard with an ozonator, which helps to disinfect and purify the water, but we also recommend sanitising and maintenance treatments using specific products to keep the water impeccably clean and clear.

Ozone is a very safe water sanitisation system as it eliminates 99.9% of micro-organisms, bacteria, viruses and parasites.

The use of ozone offers important advantages: it does not release flavours or odours, it does not irritate the eyes or the skin and reduces the use of further products for the disinfection of water.

The action of ozone is completed optimally by the use of bromine tablets.

TREATMENT CALENDAR

Use this calendar, making a copy of it if necessary, to note the days in which the treatments were done or when they are scheduled.




When using multiple additives avoid using them at the same time (try to schedule the activities 2-3 days apart) and note their compatibility: read the information labels or request information from the product dealer.

TREATMENT	DATE	DATE	DATE	DATE	DATE	DATE
Disinfectant treatment:						
OXYGEN						
BROMINE						
SUPER-DISINFECTION						
Anti-algae treatment						
Flocculant						
Anti-foam treatment						
Anti-fat treatment						
Sequestering agent						
Parameter check						
Minipool water change						

TREATMENT	DATE	DATE	DATE	DATE	DATE	DATE
Disinfectant treatment:						
OXYGEN						
BROMINE						
SUPER-DISINFECTION						
Anti-algae treatment						
Flocculant						
Anti-foam treatment						
Anti-fat treatment						
Sequestering agent						
Parameter check						
Minipool water change						

TREATMENT	DATE	DATE	DATE	DATE	DATE	DATE
Disinfectant treatment:						
OXYGEN						
BROMINE						
SUPER-DISINFECTION						
Anti-algae treatment						
Flocculant						
Anti-foam treatment						
Anti-fat treatment						
Sequestering agent						
Parameter check						
Minipool water change						

TREATMENT	DATE	DATE	DATE	DATE	DATE	DATE
Disinfectant treatment:						
OXYGEN						
BROMINE						
SUPER-DISINFECTION						
Anti-algae treatment						
Flocculant						
Anti-foam treatment						
Anti-fat treatment						
Sequestering agent						
Parameter check						
Minipool water change						

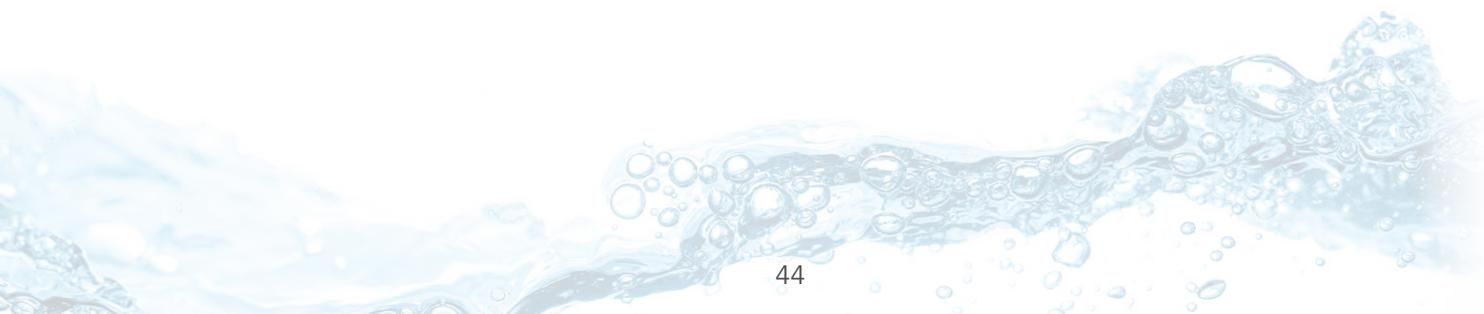

3 CLEANING THE PAPER FILTER





 Cartridge cleaning must be done after having switched off the minipool's main power.

Cleaning/replacing the paper filter depends on how often the minipool is used. In general, rinse the cartridge every **2-3 weeks** and replace it with every change of water.

For cleaning just remove the cartridge from the filter and wash it with a jet of clean water to remove hair and other foreign substances. For a deeper cleaning, leave the cartridge immersed in a solution suitable for cleaning this type of filter, possibly overnight. In any case refer to the instructions provided by the manufacturer of the cleaning product used.

 When cleaning is complete, wait until the cartridge is dry and then place it in its compartment.

 For replacement, it is recommended to dispose of the dirty filters according to the regulations in force in the country of use.

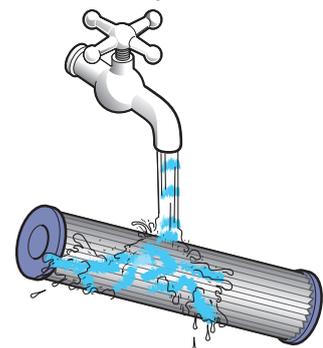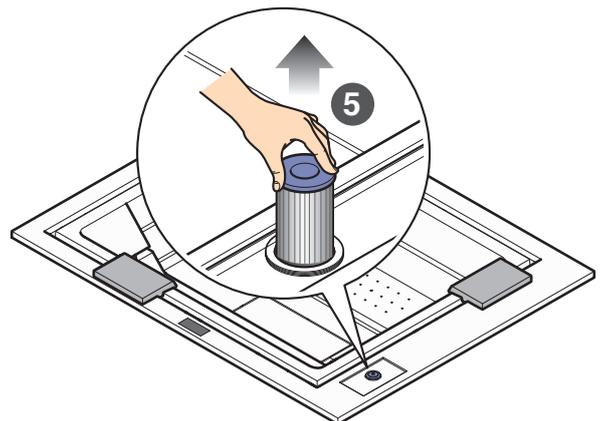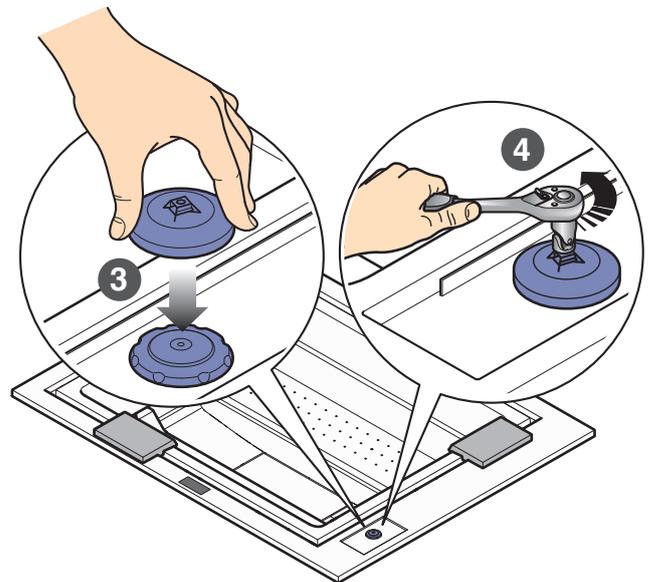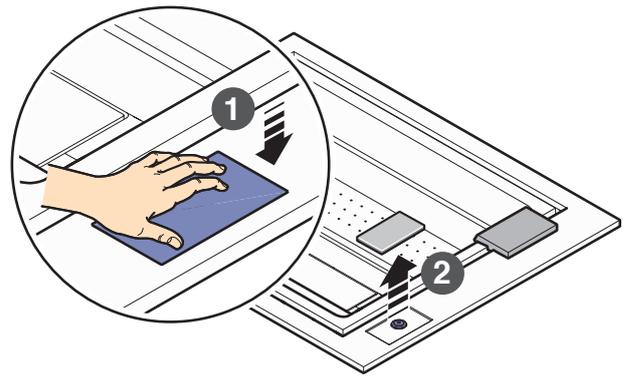

More information

WHAT IS THE PAPER FILTER?

The paper filter is a cylinder-shaped cartridge, mainly consisting of cellulose and polyamide.

The water in the minipool enters the filter through a hole and comes out from another, filtered and cleaned thanks to the cartridge within, capable of retaining even very fine dust.

4 NON-USE OF THE MINIPOOL FOR PROLONGED PERIODS

In case of prolonged inactivity or at the end of the summer season it is good to carry out some simple operations that preserve the minipool during inactivity.

CLOSING THE MINIPOOL

- 1 Check the paper filter and clean it if necessary.
- 2 Completely empty the minipool (see page 21).
- 3 Disconnect the minipool power switch.
- 4 Close the water supply gate valve.
- 5 Empty the pipes by opening the drainage valves.
- 6 Use a soft cloth for cleaning, moistened with a specific product for stratified resin minipools.




Do not use garden hoses for rinsing so as not to fill the plumbing circuit with water again.

- 7 Dry the minipool with deerskin and protect it with the optional cover.

RESTARTING THE MINIPOOL AFTER PROLONGED INACTIVITY

- Perform a rapid cleaning of the minipool using a bit of water and a detergent for acrylic surfaces. Do not use cloths or cleaners that are abrasive, aggressive or that contain solvents because they could irreparably damage the surface of the minipool.
- Reopen the gate valve for the water supply and, for outdoor installations, close the drainage valves.
- Check the parameters (hardness, pH, alkalinity) of the water that will be added. If the values are not optimal, after filling add specific products (see page 37).
- Fill the minipool again and put the paper filter back in if it has been removed.

To preserve the surfaces it is recommended to apply wax specific for minipools in layered resin during periods of inactivity or at the beginning of the season. For methods of use carefully follow the product's instructions.

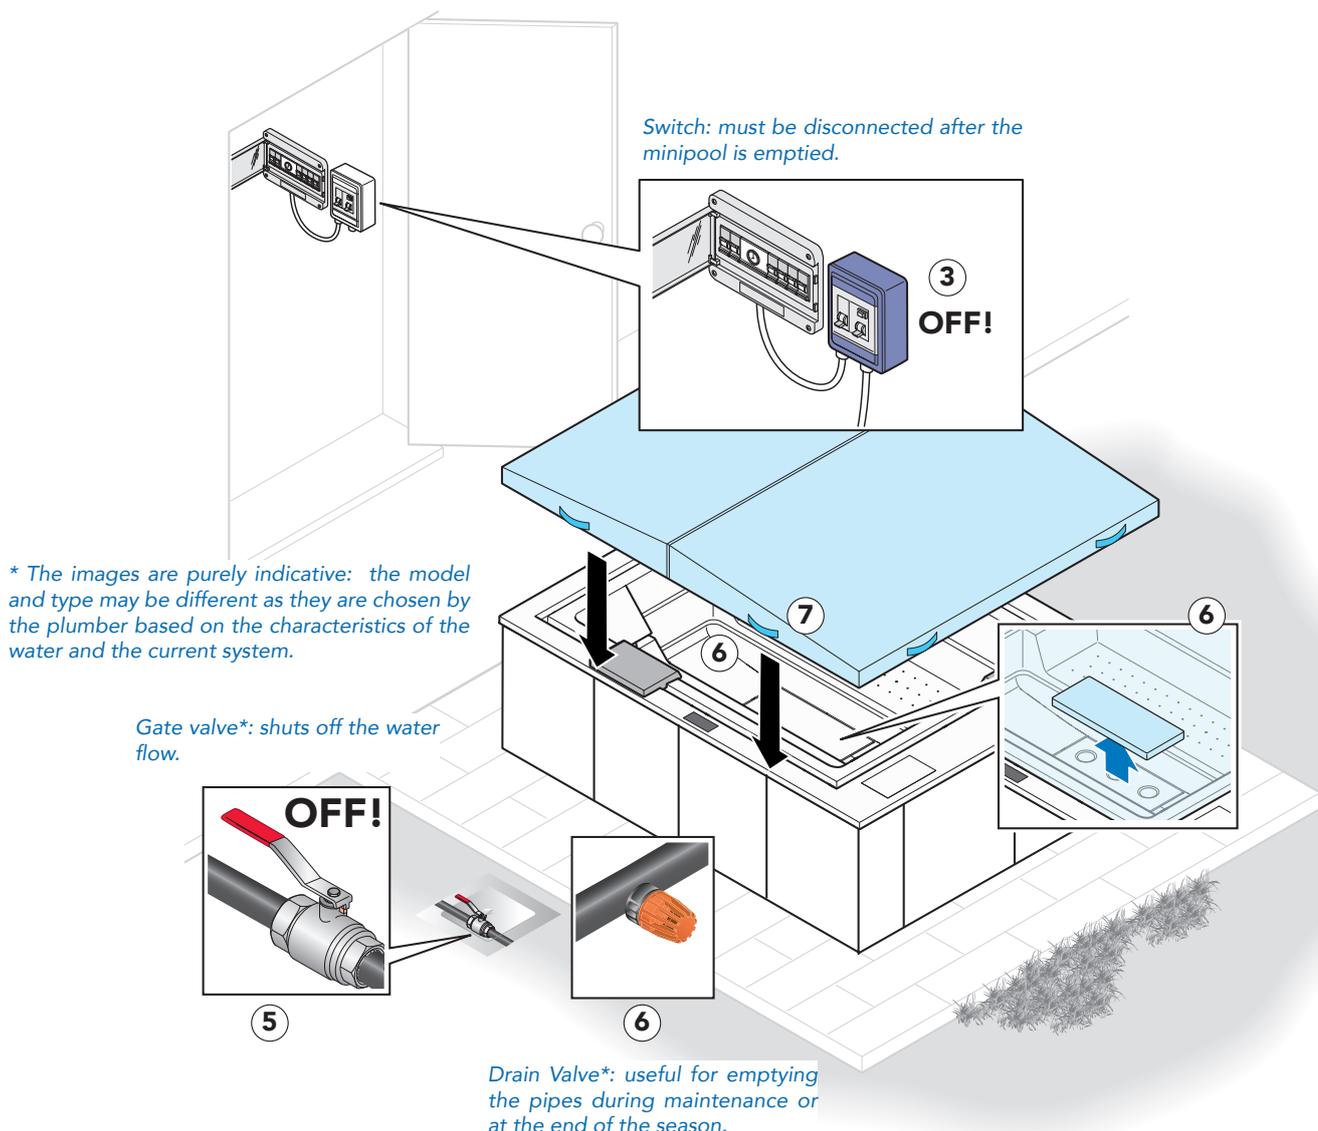

5 CLEANING THE MINIPOOL

The surface of your minipool is in stratified resin, glossy, polished and resistant: with proper maintenance and cleaning the surface will remain like new for a long, long time!



During maintenance of the minipool, use personal protection equipment all the time (i.e. protective gloves and glasses).



Before carrying out any maintenance disconnect the minipool's power supply.

For an effective and safe cleaning it is necessary to drain the minipool (see page 21).



Do not leave the empty minipool in DIRECT SUNLIGHT. The surface temperature could rise above 80°C resulting in serious damage, including cavitation and the deformation of the surface and components (damage caused by direct exposure to sunlight is not covered by the warranty).

Under these conditions or when not used, use a cover to protect the minipool (we recommend the optional Tressse cover).

To clean the surfaces use a soft cloth and mild products suited to the bathtub's material (layered resin). They are readily available at any specialised store or upon request to the Manufacturer.

Follow the instructions for use stated on the product label. Always finish by drying it perfectly, preferably with deerskin.

Absolutely avoid abrasive, aggressive (e.g., solvents or acetone) or alcohol-based cleaners and cloths.



Do not use descaling products as they are too aggressive.

To clean the canvas cover use a soft cloth and mild products. They are readily available at any specialised store or upon request to the Manufacturer.

For the cleaning of the wooden panels (optional) use a soft cloth dampened with water, treating them periodically with protective products for wood.

To restore the brilliance of the surfaces or remove stubborn stains (e.g., nicotine), it is possible to use car polish spread with cotton.

To preserve the surfaces it is recommended to apply wax specific for minipools in layered resin during periods of inactivity or at the beginning of the season. For methods of use carefully follow the product's instructions.

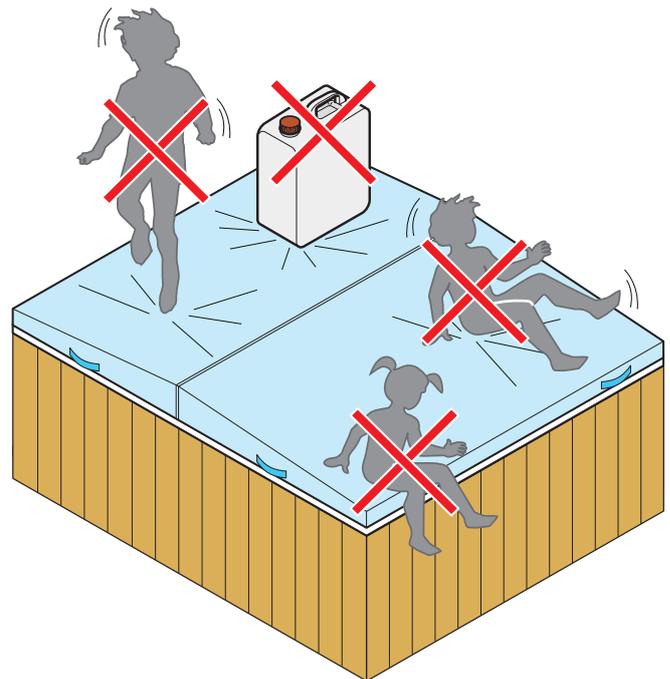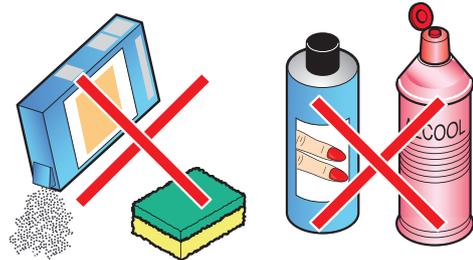

Cover the minipool when it is not in use (we recommend the optional Tressse cover). In addition to preserving the surfaces, it maintains the water temperature, protects it from falling leaves or other debris and also the sun's rays (if outdoors).

The cover is especially useful if the minipool is installed outdoors. In this case it might be useful to anchor it with lashing straps in order to prevent the wind from moving it or blowing it off.



The cover is not designed to support weights. Do not walk, jump, sit or place any objects on it.

WARRANTY CONDITIONS

Under this warranty, the manufacturer will repair or replace free of charge only the parts that have manufacturing defects. Therefore under the warranty the purchaser cannot request termination of contract, compensation of damages or the complete replacement of the product.

Once the warranty has expired, service and repairs will be provided in exchange for payment. The Authorised Technical Service Centre contacted by the customer will apply the current rates, approved by the Manufacturer.

Not covered by the warranty:

- Mirrors.
- Lights.
- Fuses.
- Masonry works which may be necessary for the removal of the defective parts.
- Components that may be defective due to negligence of use, incorrect installation or maintenance, transportation and generally due to causes not directly attributable to defects in the product's manufacture.

The Manufacturer accepts no responsibility for any damage to people, animals or property resulting from failure to follow the instructions provided in the product installation and maintenance manual.

For service where there is no evidence of product defect as well as for installation, all expenses will be borne by the customer.



**IMPORTANT
NOTICE**

Service under warranty will only be performed if:

- The purchaser has documents proving the actual date of purchase.
- During installation, operation and maintenance current regulations, the instructions given in the product installation and maintenance manual and the precautions recommended by the manufacturer have all been complied with.

CERTIFICATE OF WARRANTY

With this document the manufacturer guarantees the product purchased for a period of:

2 years on fibreglass parts of tubs and showers. Excluded therefore from the warranty are fittings and electrical and plumbing equipment that guarantee the operation of the product even if sold together with it.

2 years on the remaining parts sold with the product.

The warranty starts from the date of purchase. Such date will be demonstrated by the receipt or any other document proving the purchase of the goods.

DISPOSAL AT END OF LIFE

As per Legislative Decree no. 49 art. 13 dated 2014 "Implementation of WEEE Directive 2012/19/EU on electric and electronic waste"



The WEEE symbol of a crossed out wheeled bin with a black line across it specifies that the product has been placed on the market after the 13th August 2005 and that at the end of its life it must not be disposed of together with other waste but must be disposed of separately.

All the equipment has been made with recyclable metal materials (stainless steel, iron, aluminium, zinc plate, copper, etc.) that as a percentage make up more than 90% of the weight.

The equipment must be made ready for disposal by removing the power cable and any doors for closing compartments or cavities (where present).

Attention must be paid to the management of this product at the end of its life, reducing any negative impact on the environment and improving the efficiency of resources, applying the principles of "who pollutes pays", prevention, preparation for re-use, recycling and recovery. Please remember that illicit or incorrect product disposal is punishable by law.

Information on disposal in Italy

WEEE equipment in Italy must be delivered to:

- Collection Centres (also named eco-islands or eco-platforms)
 - The dealer where new equipment is purchased who must withdraw it free of charge ("one to one" withdrawal).
- Information on disposal in European Union countries
The EU Directives on WEEE equipment has been adopted in different ways by different countries, therefore in order to dispose of this equipment correctly we suggest that you contact your local authority or your dealer in order to ask the correct method of disposal.

Below are some problems you may encounter while using the minipool.

If the solutions offered do not solve the problem contact your dealer or the minipool manufacturer for suggestions.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Cloudy water, not very clear or dust in suspension	<ul style="list-style-type: none"> • Water with unbalanced values (hardness, pH, alkalinity). • Incorrect or infrequent water treatment. • Excessive dirt brought in by users. • Weather (if installed outdoors). 	<ul style="list-style-type: none"> • Refer to the chapters: <ul style="list-style-type: none"> ① page 37 ② page 41 ③ page 45 • Take a shower before entering the minipool to remove residues of cosmetics or lotions. • Cover the minipool when not in use.
Foam on the surface of the minipool	<ul style="list-style-type: none"> • Residues from sunscreens, cosmetics, soaps. • Water with unbalanced values (hardness, pH, alkalinity). • Overly soft water (lower hardness to 7°f). 	<ul style="list-style-type: none"> • Take a shower before entering the minipool to remove residues of cosmetics or lotions. • Refer to the chapters: <ul style="list-style-type: none"> ① page 37 ② page 41
Slippery bottom and walls, the presence of algae, greenish colour	<ul style="list-style-type: none"> • Water with unbalanced values (hardness, pH, alkalinity). • Incorrect or infrequent water treatment 	<p>Refer to the chapters:</p> <ul style="list-style-type: none"> ① page 37 ② page 41
Bad odour or mould	<ul style="list-style-type: none"> • Water with unbalanced values (hardness, pH, alkalinity). • Incorrect or infrequent water treatment. • Water changed too infrequently. • Canvas cover not cleaned well. 	<ul style="list-style-type: none"> • Refer to the chapters: <ul style="list-style-type: none"> ① page 37 ② page 41 • For the cleaning of the canvas cover, see page 47

PROBLEM	POSSIBLE CAUSE	SOLUTION
Unstable pH value	A very unstable pH could be caused by a bad balance of total alkalinity (Complete Alkalimetric Titre - CAT).	Refer to the chapters: ① page 37
Irritation of eyes, mucous membranes and skin	<ul style="list-style-type: none"> • Water with unbalanced values (hardness, pH, alkalinity). • Water with disinfectant treatments that are too aggressive or too concentrated. 	Refer to the chapters: ① page 37 ② page 41
The whirlpool pumps and the blower start by themselves	The minipool has an automatic mixing function that in sequence activates the various whirlpool pumps and the blower to mix the water in the bathtub. This provides for a more effective filtering action.	See chapter "SILENCE MODE" on page 18 to prevent recirculation in some hours of the day (e.g., during the night).

Maximum care has been paid to guarantee the accuracy of this manual.

The Manufacturer reserves the right to modify the equipment or the documentation at any time, without notice.

Therefore there might be small differences between this manual and the product you have received: we apologise in advance for any inconvenience.

The total or partial reproduction of this manual without the Manufacturer's consent is prohibited. Measurements are purely indicative and not binding.

The original language of this manual is Italian: the Manufacturer is not responsible for any mistakes in translation/interpretation.

treesse

www.gruppotreesse.it

GRUPPO TRE S s.p.a.

01036 Nepi (VT) - Italy

S.S. Cassia km. 36.400

Settevene industrial area

tel. (+39) 0761 527242

fax (+39) 0761 527223

info@gruppotres.it